


## **CLEANFLOW Electronic Air Cleaner**

*Replacing the 2 piece filter media with a 1 piece filter media*

### **FITTING INSTRUCTIONS**

#### **1. REMOVING THE 2 PIECE FILTER**

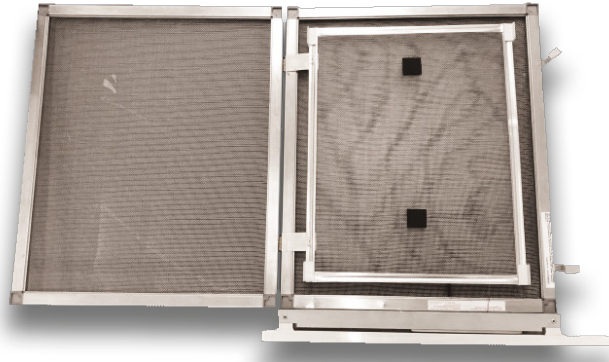


- 1.1 Remove and discard the used filter media from both sides of the centre screen and clean off any residual dust.
- 1.2 Remove the backing from the self adhesive foam spacer and attach to the centre screen as shown taking care not to blend the mesh.

#### **2. INSERTING THE MESH**



- 2.1 Insert the new one piece mesh into the filter assembly ensuring it is tucked under both the charging probe and the discharge pin as shown.
- 2.2 The new pad may have two different coloured sides, orientation is not important.

#### **3. CLOSING THE FRAME**

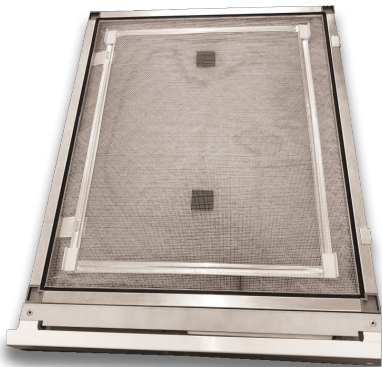

- 3.1 Close the frame and slot back into the filter frame on the unit.

