



sustainable solutions **under one roof**

HEATING / HOT WATER / VENTILATION

Publication No. ZZ 1133-7
October 2016

ECONOMAIRE 65

Warm Air Heater

with Intejan Water Circulator



INSTALLATION, COMMISSIONING
& SERVICING INSTRUCTIONS

Economaire 65 - G.C. No. 42-416-18

Intejan Water Circulator - G.C. No. 42-416-99

These instructions are to be left with the User



www.johnsonandstarley.co.uk

CONTENTS

The Benchmark Scheme	2	15 Intejan Circulator Commissioning	15
1 Features	3	<i>Preparation</i>	
2 General Description	3	<i>Lighting Ignition & Main Burner</i>	
3 Building Standards & Regulations	4	<i>Water Burner Pressure Test</i>	
4 Safety & Gas Information	4	<i>Safety Check</i>	
<i>General Safety Information</i>		16 Users Instructions	16
<i>Gas Categories</i>		17 Servicing & Maintenance	17
<i>Gas Supply</i>		<i>Routine Maintenance</i>	
5 Technical Data	5	<i>Multi Functional Control & Air Heater</i>	
6 Heater Compartment Clearances	5	<i>Water Circulator Burner Assembly Removal</i>	
7 Ventilation Air	6	<i>Burner Assembly Removal</i>	
8 Duct System	6	<i>Ignition Burner & Electrode Removal & Replacement</i>	
<i>Return Air</i>		<i>Air Circulation Fan Removal & Cleaning</i>	
<i>Warm Air Delivered</i>		<i>Control Module Removal</i>	
9 Flue Instructions	7	<i>Time Control, Switch & LED Indicator Removal</i>	
<i>Flue Installation</i>		<i>Fan Delay Control/Limit Switch Removal</i>	
<i>Flue Terminal Positions</i>		<i>Water Circulator Thermostat Removal</i>	
<i>Terminal Dimensions</i>		<i>Heat Exchanger Access</i>	
<i>Horizontal Terminal Location</i>		<i>Flue Fan removal & Cleaning</i>	
<i>Vertical Terminal Location</i>		18 Defect Diagnosis	20
<i>Plume Terminal Positions</i>		19 Fault Finding Flowcharts	21
<i>Conventional 80/125mm Flue Accessories</i>		20 Logic Diagram	24
10 Electrical	11	21 Schematic Diagram	25
<i>Mains Supply</i>		22 Circuit Diagram	26
<i>Thermista-stat & It's Location</i>		23 Dimensions	27
11 Gas	11	24 Short List of Spares	28
12 Fitting Instructions	11	25 Exploded Diagram	29
13 Air Heater Commissioning	13	26 Benchmark Checklist and Service Record	30
<i>Preparation</i>			
<i>System Balancing</i>			
<i>Lighting Ignition & Main Burner</i>			
<i>Main Burner Pressure Test</i>			
<i>Automatic Controls Check</i>			
<i>Safety Check</i>			
14 Intejan Circulator	14		
<i>Water Circulator System</i>			
<i>Water Connections</i>			



PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. LEAVE THESE INSTRUCTION WITH THE USER OR AT THE GAS METER AFTER INSTALLATION

The Benchmark Scheme

Benchmark places responsibilities on both manufacturers and installers. The purpose is to ensure that customers are provided with the correct equipment for their needs, that it is installed, commissioned and serviced in accordance with the manufacturer's instructions by competent persons and that it meets the requirements of the appropriate Building Regulations. The Benchmark Checklist can be used to demonstrate compliance with Building Regulations and should be provided to the customer for future reference.

Installers are required to carry out installation, commissioning and servicing work in accordance with the Benchmark Code of Practice which is available from the Heating and Hotwater Industry Council who manage and promote the Scheme.

Visit www.centralheating.co.uk for more information.

In the interest of continuous development Johnson and Starley reserve the right to change specification without prior notice. Johnson and Starley prides itself on it's ability to supply spare parts quickly and efficiently.

1. FEATURES

Appliance Classification:

ECONOMAIRE 65/INTEJAN has been tested and certified by Advantica Technologies for use with NATURAL gas G20.

NOTE: These instructions have been written to service both the ECONOMAIRE 65 and the ECONOMAIRE 65 INTEJAN. If your heater does not have the intejan circulator fitted, simply ignore the relevant section/s.

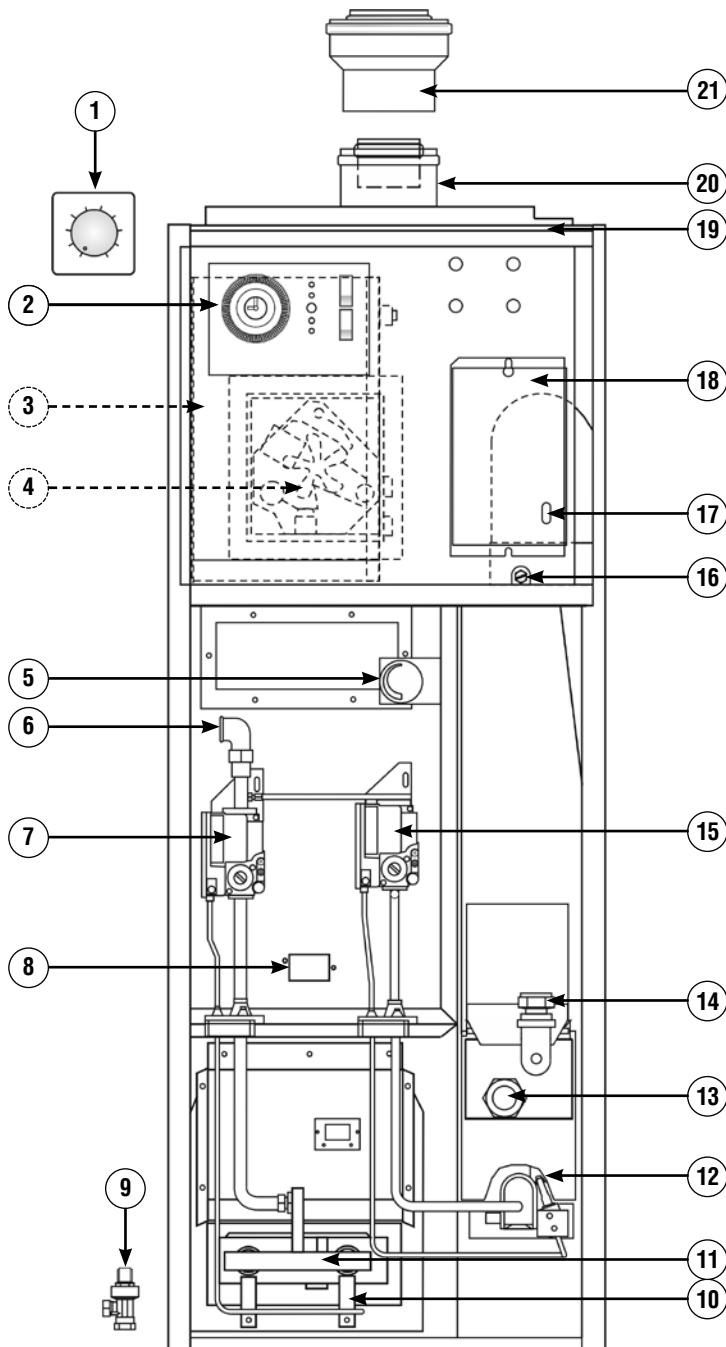


FIGURE 1. ECONOMAIRE 65 FEATURES

FEATURES

1. Thermosta-stat
2. Time control
3. Air circulator fan
4. Combustion air fan
5. Circulator thermostat
6. Gas connection
7. Air heater multifunction control
8. FDC & limit switch
9. Gas cock
10. Ignition burner assembly
11. Main burner assembly
12. Intejan water circulator
13. Water return connection
14. Water flow connection
15. Circulator multifunction control
16. Flue gas test point
17. LED diagnostics indicator
18. Control module
19. Filter
20. Flue adapter
21. 4" to 5" flue enlarger

WARNING!
This appliance
requires a 5" flue.

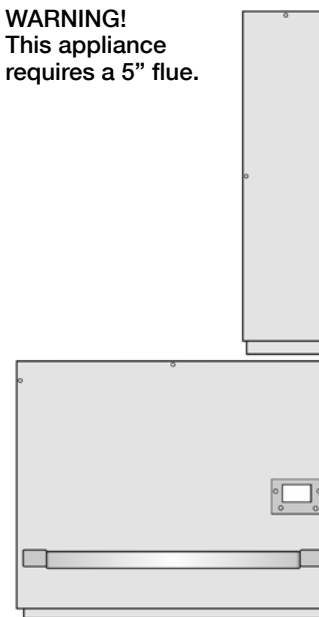


FIGURE 2. SEALING PANEL

2. GENERAL DESCRIPTION

- 2.1 The ECONOMAIRE 65/INTEJAN is a fan assisted downflow ducted warm air heater, which is fan flued and room sealed. The heater is supplied with digital temperature control (for maximum comfort) and a water circulator is standard on the 65 INTEJAN. However, an INTEJAN circulator (retro-fit) kit is available for the ECONOMAIRE 65.
- 2.2 The air heater output can be adjusted between 16.1kW (58.0MJ/h, 55,000 Btu/h) and 19.1kW (68.6MJ/h, 65,000 Btu/h) "summer air circulation" of unheated air is available by manual selection (see the user's instructions). INTEJAN output is 3.5kW (12.6MJ/h; 11,900Btu/h).

3. BUILDING STANDARDS & REGULATIONS



STATUTE LAW DEFINES THAT ALL GAS APPLIANCES MUST BE INSTALLED BY COMPETENT PERSONS, i.e. GAS SAFE REGISTERED INSTALLERS.

GAS SAFE MEMBERSHIP ENQUIRIES TEL: 0800 408 5500 IN ACCORDANCE WITH THE GAS SAFETY (INSTALLATION AND USE) REGULATIONS (CURRENT EDITION).

FAILURE TO COMPLY WITH THESE REGULATIONS MAY LEAD TO PROSECUTION.



3.1 INSTALLATION REGULATIONS

- Gas Safety (Installation and Use) Regulations (as amended)
- Model and Local Authority Byelaws
- Health & Safety Document No. 635.
- The Electricity at Work Regulations
- Institute of Electrical Engineers (I.E.E) Wiring Regulations
- British System Design Manual “Gas Fired Warm Air Heating”
- EN Regulations No. 1196 Supplementary Instructions - Condensing Air Heaters

3.2 BUILDING STANDARDS AND REGULATIONS

Where no specific instructions are given, reference should be made to the relevant British Standard Code of Practice.

Building Standards (Scotland) (Consolidation) Regulations

Building Regulation (Northern Ireland)

Building Regulations Part L

- BS 6891** Installation of Low Pressure Gas Pipework of up to 28mm (R1) in domestic premises (2nd family gases).
- BS 5440:1** Flues (for gas appliances of rated input not exceeding 70 kW).
- BS 5440:2** Ventilation (for gas appliances of rated input not exceeding 70 kW).
- BS 5864** Installation of Gas Fired Ducted Air Heaters
- BS 5546** Installation of Domestic Hot Water Supplies.

IMPORTANT: This appliance is CE certificated for safety and performance. It is important that no modifications are made to this appliance, unless fully approved in writing by Johnson & Starley Ltd. If in doubt please ring Johnson & Starley Ltd on Telephone 01604 762881.

4. SAFETY & GAS INFORMATION

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE COMMENCING WITH THE INSTALLATION

4.1 GENERAL SAFETY INFORMATION

- 4.1.1 Ensure the mains supply voltage, frequency, number of phases and power rating comply with details on the rating label.
- 4.1.2 All wiring must be in accordance with the appropriate standards. The equipment must be supplied with a double pole isolator switch.
- 4.1.3 Ensure safety regulations and practices are adhered to when installing and using this equipment.
- 4.1.4 The weight of this appliance exceeds that recommended for a one-man lift. It will therefore be necessary to gain assistance at times during the installation procedure.
- 4.1.5 It should be noted that this appliance may contain sharp edges. Care **MUST** be taken when handling the appliance to prevent injury.
- 4.1.6 Once the appliance has been fired beware that certain parts will be hot to the touch.
- 4.1.7 Do not install flues during rain, high winds or in severe weather conditions.

4.2 GAS INFORMATION

4.2.1 Gas Categories

- a. The appliance is certified as a CAT I 2H (20) appliance.

4.2.2 Gas Supply

- a. The gas installation must be completed in accordance with the relevant standards (BS 6891).
- b. The installation must be tested for gas tightness using suitable methods. The Pipework should also be purged of air in accordance with the IG Publication Standard.

5. TECHNICAL DATA

TABLE 1	ECONOMAIRE 65						ECONOMAIRE 65 INTEJAN		
WEIGHT	48kg						86kg		
GAS	G20								
GAS SUPPLY PRESSURE	20mbar								
GAS CATEGORY	I 2 H								
COUNTRIES OF INSTALLATION	GB & IE								
ELECTRICAL SUPPLY	230v ~ 50Hz fused 5A (150 watts)								
NOx Class	1								
MAXIMUM WATER SIDE OPERATING PRESSURE (PMS)	n/a						3 bar		
OPEN VENTED SYSTEM	n/a						YES		
SEALED SYSTEM	n/a						YES		
	AIR HEATER						WATER CIRCULATOR		
	MINIMUM			MAXIMUM					
	KW	MJ/h	Btu/h	KW	MJ/h	KW	KW	MJ/h	Btu/h
INPUT (GROSS)	21.6	77.6	73,550	25.0	90.0	85,302	4.86	17.5	16,600
OUTPUT	16.1	58.0	55,000	19.1	68.6	65,000	3.5	12.6	11,900
GAS RATE CV 1037Btu/FT³	2.05m ³ /h (72.62ft ³ /h)			2.38m ³ /h (84.22ft ³ /h)			0.458m ³ /h (16.2ft ³ /h)		
BURNER SETTING PRESSURE (HOT)	11.5mbar (4.6 in wg)			15.5mbar (6.2 in wg)			15.0mbar (6.0 in wg)		
MAIN INJECTOR	Bray Cat 23/850						Amal 187/001/400		
CROSS-LIGHTER INJECTOR	Bray Cat 10/60								

6. HEATER COMPARTMENT CLEARANCES (see BS 5864)

- 6.1 **IMPORTANT** - If the heater is to be fitted to an existing base duct (warm air plenum), always ensure when installing the appliance, the rear left hand corner of the heater is aligned with the rear left hand corner of the base duct. If there is any overhang or blanking off it will be at the front or right hand side of the heater. In any event, blanking plates must be mechanically secured and all joints sealed.
- 6.2 When the heater is fitted into a compartment, a minimum clearance from the compartment walls of 38mm (1½") at the rear, 75mm (3") total at the sides (with a minimum of 25mm (1") at any one side), and 63mm (2½") at the front must be left. Consideration should also be given to the space required for the removal and replacement of the filter tray and the entry of the gas and electrical supplies.
- 6.3 For service access, a minimum of 600mm (24") is required at the front of the heater. Space must also be allowed, in a compartment installation, to permit the removal of the heater. The clearance between the appliance and the compartment should be not less than 75mm (3"). However, if clearances are less than 75mm, the internal surface of the compartment must be lined with non-combustible material and the compartment must be of a fixed rigid structure.
- 6.4 In airing cupboard installations, the part used as the air heater compartment must comply with the relevant section of BS 5864 and must be completely separated by either a non-combustible partition or a perforated metal partition with the perforations not exceeding 13mm (½"). The secondary flue must be a tight fit where it passes through the partition and must be suitably protected (see BS 5440: Part 1).
- 6.5 In under-stairs installations, the compartment must comply with the relevant section of BS 5864, provided that in addition all internal surfaces (including the base) are non-combustible or lined with non-combustible material. This requirement is applicable only to dwellings of more than two storeys.
- 6.6 Where the air heater is to be installed onto a combustible surface and under-floor ducting used, a suitable base tray (BT65/90) MUST be used in order to provide insulation.

NB: Where a base plenum is used no base tray is required!

7. VENTILATION AIR

- 7.1 When installed in a compartment two permanent ventilation openings into the compartment are required, one at high level and one at low level. The minimum effective areas specified in Table 1 are related to the rated heat input of the air heater and assume that an INTEJAN circulator is fitted.

8. DUCT SYSTEM (See British Design Manual - Gas fired Warm Air Heating)

8.1 RETURN AIR

- 8.1.1 Room-sealed appliances may be installed without return air ducting, provided that the path between the return air grille and the appliance return air inlet is protected in such a manner that the required air-flow will be maintained at all times. The return air grille **MUST** have a free area of not less than 1593cm² (291in²). It is recommended that the return air duct not be routed directly from the main living area, but from a convenient central area serving the remainder of the dwelling.
- 8.1.2 The return air system should be constructed of fire-resistant material. The flue shall not be run through an area serving as a return air plenum. It is extremely important that the correct size of return air grilles and ducting is used. For heaters on maximum output the return air duct size should not be less than the equivalent of 300mm x 300mm (12" x 12"). If flexible duct is used the duct diameter should not be less than 350mm (16") dia. The return air grille should have a free area of not less than 1593cm² (291in²).
- 8.1.3 An adequate and unobstructed return air path is essential from areas not served by a directly ducted return and to which warm air is delivered. All such rooms should be fitted with relief grilles which have a free area of 0.0088m²/kW (1in²/250Btu/h) of heat supplied to the room. The only exceptions are kitchens, bathrooms and WCs.
- 8.1.4 The return air duct should allow for ease of removal for access to the flue.
- 8.1.5 All duct work in the room or internal space in which the heater is installed shall be mechanically secured and sealed with ducting tape.

8.2 WARM DELIVERED AIR

- 8.2.1 All duct work, including riser ducts, should be fully insulated with 50mm (2") fibreglass or similar. If short extended duct runs are taken below floor level these should be similarly insulated and in addition wrapped with a sound vapour proof barrier. They must also be protected from crushing.
- 8.2.2 The duct system should be carefully designed (as given in the guidelines in the British System Design Manual) to suit the needs of specific heating requirements and building layout. The type of duct system (e.g. radial/extended plenum/ stepped) should be installed using the least number of fittings to minimise airflow resistance. The base duct, which equalises the air pressure to supply ducts, must be constructed to support the weight of the heater, which must be sealed using self-adhesive foam strip, ducting tape or sealing compound. All ducting and blanking plates must be mechanically secured and sealed.

VENTILATED FROM INSIDE BUILDING	Low level grille 270cm ² (42.0in ²)
	High level grille 270cm ² (42.0in ²)
VENTILATED FROM OUTSIDE BUILDING	Low level grille 135cm ² (21.0in ²)
	High level grille 135cm ² (21.0in ²)

TABLE 2. MINIMUM EFFECTIVE AREAS

9. FLUE INSTRUCTIONS

NOTE: THIS APPLIANCE MUST ONLY BE INSTALLED WITH THE SUPPLIED ACCESSORIES AND TERMINAL.

- 9.1 The installation of the warm air heater and flue system must be in accordance with the Gas Safety (Installation and Use) Regulations 1998 and the Building Regulations. If no specific instructions are given, reference should be made to the relevant codes of practice.

THESE RELEVANT STANDARDS SHOULD BE FOLLOWED

BS 5440:1 Flues and ventilation for gas appliances of rated heating input not exceeding 70kW (net) : Flues

- 9.2 The flue must conform with Building Regulations and British Gas Materials and Installations specification (3rd edition) regarding clearance and shielding from combustible materials.
- 9.3 Ensure all legislation, regulations and directives mentioned are observed.
- 9.4 Ensure while installation work is being carried out that no debris such as swarf, filings or fragments of mortar are allowed to remain in the air/flue duct.

9.5 FLUE INSTALLATION

ECONOMAIRE 65/INTEJAN is designed to be used with a 125mm flue and the supplied flue enlarger MUST be fitted directly on top of the flue adaptor! The heater can be used with horizontal or vertical flue types C12 and C32.

- 9.5.1 All joints must be soundly sealed.
- 9.5.2 Sufficient support brackets must be used in order to support the total weight of the flue system.
- 9.5.3 The horizontal flue length **MUST NOT** be less than 300mm plus 90° bend and **MUST NOT** exceed 18m excluding terminal.
- 9.5.4 The total vertical flue length **MUST NOT** be less than 1m and **MUST NOT** exceed 18m excluding terminal.
- 9.5.5 Total length refers to the equivalent worked flue length and therefore includes bends and **NOT** the distance from the heater to the flue terminal.
- 9.5.6 When calculating total flue length, reference **MUST** be made to the following 'equivalent lengths':
- a) 90° bend = 3m
 - b) 45° bend = 1.5m
- 9.5.7 The maximum number of 90° bends that can be used is:
- a) Horizontal = 6m
 - b) Vertical = 6m
- 9.5.8 If a 'short flue' is used, the factory fitted flue orifice **MUST** be left in place. See Figure 3.
- 9.5.9 'short flue' refers to a total flue length not exceeding:
- a) Horizontal (plus 90° bend) = 0.8m
 - b) Vertical (including terminal) = 7m
- 9.5.10 Where the total flue length exceeds these lengths, the flue orifice **MUST** be removed.
- 9.5.11 The heater is supplied with either a horizontal or vertical flue, dependant upon your specification when ordering. Reference should be made to Table 4 for extra flue/terminal components.

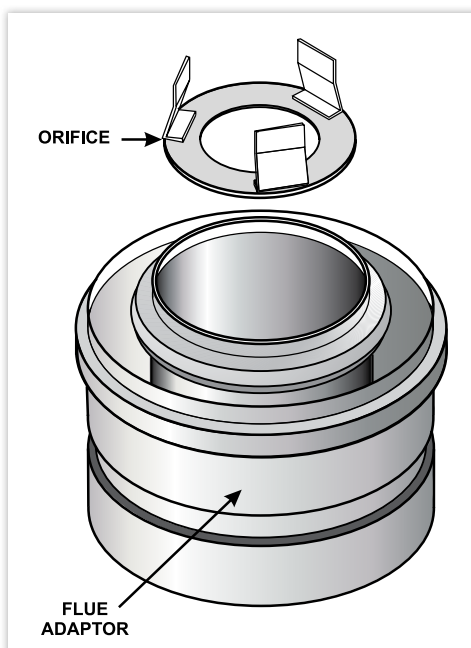


FIGURE 3. FLUE ADAPTOR & ORIFICE



FIGURE 4. TERMINAL POSITIONS

	TERMINAL POSITION	MINIMUM DISTANCE
A	Directly below an opening, air brick, opening window etc	300mm
B	Above an opening, air brick, opening window, etc.	300mm
C	Horizontally to an opening, air brick, opening window etc.	300mm
D	Below gutters, soil pipes or drain pipes.	75mm
E	Below eaves.	200mm
F	Below balconies.	200mm
G	From a vertical drain pipe or soil pipe.	150mm
H	From an internal or external corner. Greater than 450mm protrusion.	300mm
I	Above ground, roof or balcony level.	300mm
J	From a surface facing the terminal.	600mm
K	From a terminal facing the terminal.	1,200mm
M	Vertically from a terminal on the same wall.	1,500mm
N	Horizontally from a terminal on the same wall.	300mm
Q	Above intersection with roof.	530mm
P	From a vertical structure on the roof	300mm
R	From the terminal to the boundary	300mm

TABLE 3. TERMINAL DIMENSIONS

9.6 HORIZONTAL TERMINAL LOCATION

- 9.6.1 The terminal must be positioned on the outside of the building and allow for the free passage of air across it at ALL times.
- 9.6.2 The flue MUST be fitted with the protrusion as shown in Figure .5.
- 9.6.3 Avoid positions where the terminal is adjacent to projections, particularly under a balcony or immediately adjacent to a drain pipe.
- 9.6.4 The terminal position must ensure that combustion products cannot enter the building in which the heater is installed (or any adjacent building) through windows, doors or by any others means.
- 9.6.5 See Figure 4 for the recommended terminal positions.
- 9.6.6 If the heater is to be installed in a timber framed building you MUST consult: Institute of Gas Engineers document UP/7 or your local gas region.
- 9.6.7 Where the lowest part of the flue terminal is located less than 2 metres above the ground, a balcony, or above a flat roof across which there is access, the terminal MUST be fitted with a Tower Flue Components type TGD1111105 guard (or similar) such that the distance between the guard and the nearest part of the terminal is no less than 50mm.
- 9.6.8 Reference should be made to Table 2 for required terminal components and guard.

NOTE: TO ENSURE THAT RAINWATER CANNOT ENTER THE HEATER UNIT, THE FLUE MUST BE INSTALLED WITH A SLIGHT FALL AWAY FROM THE HEATER.


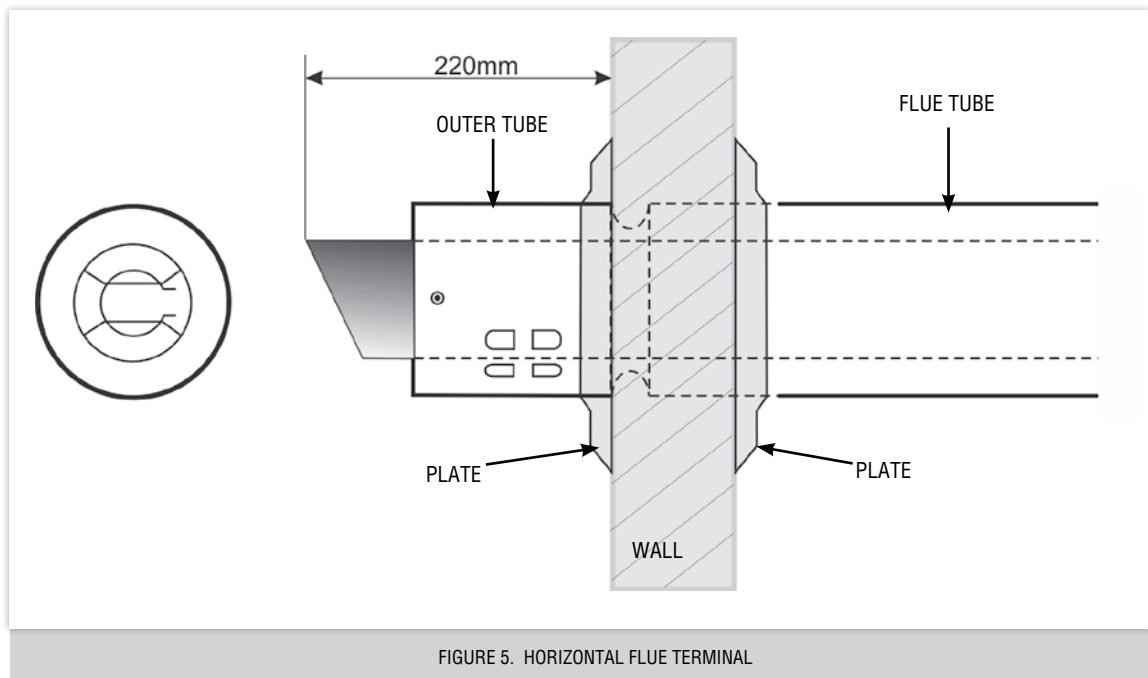


FIGURE 5. HORIZONTAL FLUE TERMINAL

9.7 VERTICAL TERMINAL LOCATION

- 9.7.1 The ECONOMAIRE 65/INTEJAN is designed to be used with a vertical flue where the installation of a horizontal flue is either not possible or not desired.
- 9.7.2 Installation of a vertical flue can be achieved on either a flat or pitched roof with a pitch angle of between 25° and 50°.
- 9.7.3 The terminal MUST be positioned on the outside of the building and allow for the free passage of air across it at ALL times.
- 9.7.4 Avoid positions where the terminal is adjacent to projections; particularly under a balcony.
- 9.7.5 The terminal position must ensure that combustion products cannot enter the building in which the heater is installed (or any adjacent building) through windows, doors or by any other means.
- 9.7.6 See Figure 4 for recommended terminal positions.
- 9.7.7 Reference should be made to Table 4 for the required terminal components.

FIGURE 6. PLUME TERMINAL OUTLET DIMENSIONS

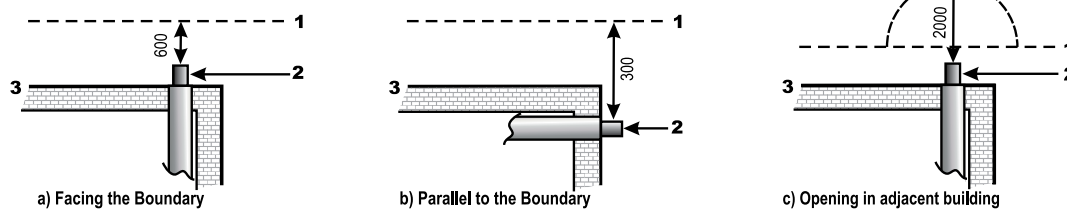

9.8 CONVENTIONAL 80/125mm FLUE ACCESSORY PARTS No's

ITEM	DESCRIPTION	QTY	PART No.	COLOUR
1	90° Standard Flue Elbow	1	1000-0016520	White
2	45° Flue Elbow	1	1000-0016530	White
3	500mm Extension	1	1000-0016550	White
4	1000mm Extension	1	1000-0016540	White
5	Vertical Terminal & Support Bracket	1	1000-0016560	Anthracite
6	Vertical Terminal & Support Bracket	1	1000-0016630	Terracotta
7	Lead Pitched Roof Flashing & Collar	1	1000-0014890	Anthracite
8	Lead Pitched Roof Flashing & Collar	1	1000-0014990	Terracotta
9	Aluminium Flat Roof Flashing	1	1000-0014900	Aluminium
10	Horizontal Wall Terminal	1	1000-0016570	White
11	Wall Plates (for above)	2	1000-0016580	n/a
12	Horizontal Wall Terminal & 2 x Wall Plates	1	1000-0016590	n/a
13	Condensate Drain	1	1000-0016600	White
14	Syphon Kit (for above)	1	1000-0014950	n/a
15	Condensate Drain & 1 x Syphon Kit	1	1000-0016610	n/a
16	Wall Bracket (100mm diameter)	1	1000-006620	n/a
17	Terminal Guard	1	1000-0017130	n/a

TABLE 4. FLUE COMPONENTS

10. ELECTRICAL

WARNING: THIS APPLIANCE MUST BE EARTHED!

10.1 MAINS SUPPLY

- a. The heater is supplied with mains cable (PVC sheathed, heat resisting to 85°C), 3 core: Brown; Blue; Green/Yellow, 6A, 0.75mm², connected to a terminal block and exiting through the heater at the right hand top. The cable is suitable for a 230V 50Hz supply and requires connection to the fixed wiring using a double pole switched, fused spur with a contact separation of at least 3mm in ALL poles. The fuse fitted must be rated 5A to BS 1362. Connections must also be in accordance with the current edition of I.E.E Regulations BS 7671.

NOTE: If, for any reason, the heater is re-wired, then **3 core cable** that meets the above specification **MUST** be used. Under NO circumstances, should 5 core cable be used for the combined purpose of supplying power to the heater and connecting the thermista-stat!

- b. Fan delay and overheat (limit controls) are not adjustable and are factory set so that the limit switch opens at 93°C and closes at 76°C.
- c. An electronic controller (thermista-stat) is supplied which acts like a room thermostat.

10.2 THERMISTA-STAT & IT'S LOCATION

- a. The thermista-stat should be located where there is free air circulation and positioned approx. 1.5m (5ft) from the floor.
- b. Avoid the following locations:
 - i. In a room where temperature is greatly affected by the sun or any other heat source, e.g. radiant fire, wall light fittings or TV set.
 - ii. Near an outside door or windows, or on an outside wall.
 - iii. Where it will be affected by warm air ducts, diffusers, waste pipes or the heater itself.
 - iv. Where it will be subjected to vibration.
- c. Connect the thermista-stat wires to terminals '8' and '9' on the terminal block (see Figures 17 & 18).

11. GAS (See BS 5864 and BS 6891)

- 11.1.1 The local gas supply conditions **MUST** be adequate for the specified burner pressures as stated in the technical specification (paragraph. 1.3)
- 11.1.2 An independent gas supply pipe from the meter is to be preferred wherever possible. Where this is not possible, the pipe must be capable of taking the complete input of the heater and all other gas appliances being served by the same pipe. This supply should be suitably sized to conform to British Standards requirements of no more than 1.0 mbar (0.4" wg) pressure drop (See table of discharge in BS 6891).
- 11.1.3 The ½" union gas cock (supplied) **MUST** be fitted to the gas inlet of the heater for easy isolation during servicing. The gas pipe should be fitted and installed so as to be durable, substantial and gas tight. To assist in determining where a gas connection may not be tight, a leak detection fluid should be applied around the connection. Under no circumstances should a flame be used to locate a gas leak. Gas entry to the air heater is through either side to a to a Rp ½ (½" BSP. internal [parallel] thread).

12. FITTING INSTRUCTIONS

CAUTION: This appliance exceeds the recommended weight for a one man lift as detailed in the Manual Handling Operations, 1992 Regulations.

It should be noted that this appliance could contain sharp edges and care **MUST** be taken when handling.

12.1 FITTING THE APPLIANCE

- 12.1.1 Making sure the plenum is clear from all debris, lift the appliance into place.
- 12.1.2 Using a spirit level it is important the appliance is completely level, this appliance **MUST NOT** lean or tilt in any direction. This will cause problems with the condense draining.
- 12.1.3 Seal the unit to the plenum, using ducting tape (not supplied). Ensure a good seal is made.
- 12.1.4 Fix all connections to the appliance ready for commissioning.

13. AIR HEATER COMMISSIONING

13.1 PREPARATION

After installation of the appliance, you **MUST** do the following:

- 13.1.1 Test for gas leakage using proprietary detection fluid and seal any leaks found.
- 13.1.2 Carry out preliminary electrical system checks.
- 13.1.3 Ensure that:
 - a. filter, fan and fan compartments are free from obstructions.
 - b. all registers or grilles are open and conform to design specifications.
 - c. return, relief and ventilation air installations are adequate.

13.2 SYSTEM BALANCING

- 13.2.1 Set the air heater electrical supply **ON**.
- 13.2.2 Set the thermista-stat to the "SUMMER AIRFLOW" position.
- 13.2.3 Balance the system to provide the required volume proportions at the warm air outlets.

NOTE: If the system includes ceiling diffusers, the air through these should be **NOT LESS THAN 1.5m/s (300ft/min)**, except for very small rooms, (i.e. bathrooms etc.). Outlet faces may require partial blanking in order to achieve this.

13.3 LIGHTING IGNITION & MAIN BURNER

- 13.3.1 Turn on the gas supply to the heater.
- 13.3.2 Set both the "AIR HEATER" and "WATER HEATER" switches on the time control unit to the "OFF" position.
- 13.3.3 Set the thermista-stat to "9".
- 13.3.4 Locate the LED status indicator which can be observed through the inspection hole at the bottom right hand corner of the control module. See Figure 6.

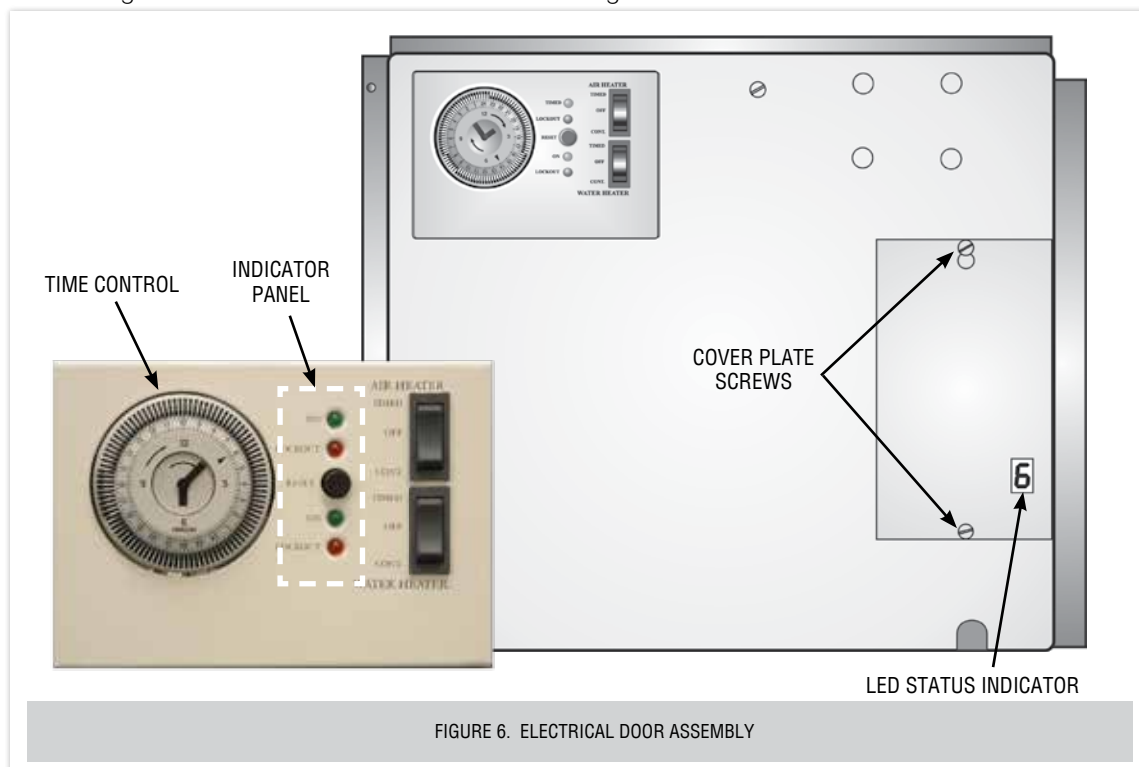


FIGURE 6. ELECTRICAL DOOR ASSEMBLY

- 13.3.5 Turn on the mains power supply to the heater.
- 13.3.6 Set the "AIR HEATER" switch on the time control to "CONT." and observe the LED status indicator.
- 13.3.7 Whilst the control module runs through its diagnostic cycle the decimal point (DP) in the bottom right hand corner of the LED display will flash continuously.
- 13.3.8 The igniter will spark for a maximum period of 60 seconds during which time the ignition and main burners **SHOULD** ignite and the igniter will stop.
- 13.3.9 When the control module reaches stage 5, (indicated by "5" on the LED) power is fed to the gas valve and the green LED "ON" light on the indicator panel will illuminate. After a period of approx. 5 seconds, the module will move on to stage 6 (indicated by "6" on the LED).

NOTE: **Regardless of when the burner ignites during the 60 second period, the LED will continue to display stage 6.**

- 13.3.10 If, after the 60 second period, the main burner has ignited the LED indicator will show "0" and the green LED "ON" light on the indicator panel will remain steady.
- 13.3.11 If the main burner fails to ignite, the red LED marked "LOCKOUT" will illuminate on the display panel and the LED status indicator will display an alphanumeric character relevant the fault detected.
- 13.3.12 In the event of a lockout and the ignition and main burners failing to ignite, reference should be made to table 4 in the fault finding section of these instructions in order to establish the fault condition.
- 13.3.13 Allow the air heater to operate for a minimum of 15 minutes to ensure stability.
- 13.3.14 Reset the thermista-stat to the desired comfort level.
- 13.3.15 Set the time control to the desired "on" and "off" periods.
- 13.3.16 Set the "AIR HEATER" switch on the time control to "TIMED"

13.4 MAIN BURNER PRESSURE TEST

NOTE: AIR HEATER BURNERS ARE FACTORY SET TO PROVIDE A NOMINAL HIGH RATE OUTPUT AS DETAILED IN SUB PARAGRAPH 2.2

- 13.4.1 Loosen the screw on the outlet pressure test point and fit a pressure test gauge, see Figure 9.
- 13.4.2 Check the gauge reading against the information at section 5.
- 13.4.3 If necessary, use the burner pressure adjuster to obtain required gauge reading in accordance with paragraph section 5 screw on the outlet pressure test point.

13.5 AUTOMATIC CONTROLS CHECK

- 13.5.1 Light the ignition and main burners as detailed in 13.3 above.
- 13.5.2 Allow the heater to operate for 15 minutes to ensure stability.
- 13.5.3 After a short period, ensure that the fan increases to full speed.
- 13.5.4 When the temperature reaches the control setting, check that the main burner cycles ON and OFF at intervals of approx. 75 to 120 seconds.

13.6 SAFETY CHECK

In order to check the correct operation of the control module, run the heater for a short period and introduce a fault condition by carrying out the following sequence:

- 13.6.1 Check for gas tightness within the appliance.
- 13.6.2 Turn on both the gas and electrical supplies to the heater.
- 13.6.3 Set the "AIR HEATER" switch on the time control unit to "CONT".
- 13.6.4 Light the ignition and main burners as described in section 13.3
- 13.6.5 Allow the heater to run for a period of 5 minutes to stabilise.
- 13.6.6 Turn off gas supply at the heater Gas Cock. DO NOT TURN OFF AT GAS METER!
- 13.6.7 Having detected the fault condition, the module should cause the red LED on the indicator panel to flash and the module will go through the ignition sequence. Having detected the fault condition a second time, the control module should cause the heater to go into lockout, indicated by a constant red LED and the LED status indicator will show "6"
- 13.6.8 Reinstate gas supply and wait for a minimum period of 10 seconds.
- 13.6.9 Depress the "RESET" button on the Indicator Panel.
- 13.6.10 The heater will go through its ignition procedure and the ignition and main burners SHOULD ignite.
- 13.6.11 Set the "AIR HEATER" switch on the time control unit to "TIMED"


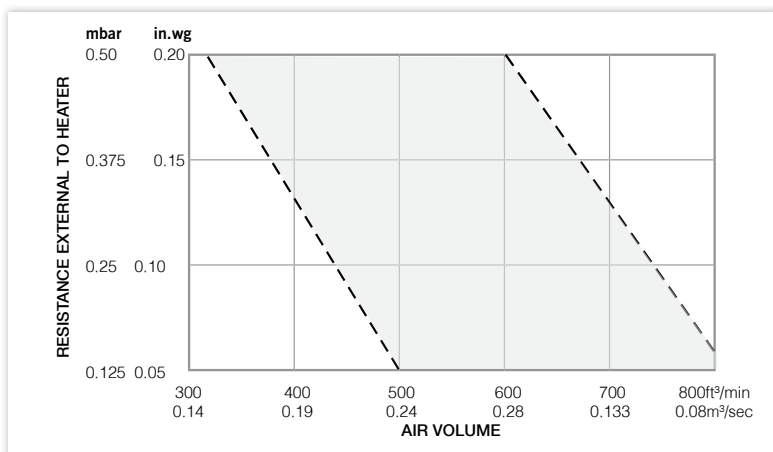


FIGURE 7. FAN PERFORMANCE GRAPH

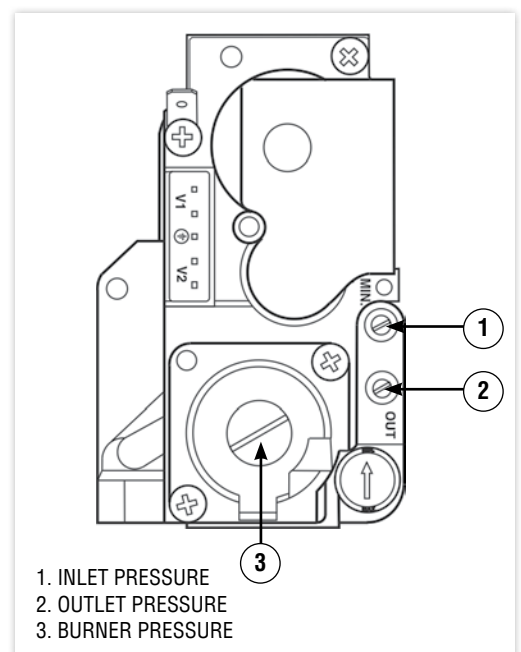

- 1. INLET PRESSURE
- 2. OUTLET PRESSURE
- 3. BURNER PRESSURE

FIGURE 9. MULTI FUNCTIONAL CONTROL with Ignition Controller Removed

14.1 WATER CIRCULATION SYSTEM

Detailed recommendations for the water circulation system are given in BS 6798, BS 5449 (for small bore and microbore central heating systems), and BS 5446. The maximum water side operating pressure (PMS) is 1bar.

- 14.1.1 To ensure good circulation in gravity circuits, flow pipes should be designed to run vertically from the water heater before running laterally. Any lateral run should be less than 2 x the previous vertical run. Pipework should be installed with a rise towards the vent point. In systems with poor circulation, a pump kit is also available.
- 14.1.2 Drain cocks must be located in accessible positions that permit the draining of the whole system, including the appliance and hot water storage vessel. A drain cock should be fitted at the lowest point of the water heating circuit and, in the case of an indirect system, another must be fitted at the lowest point of the cold feed. Drain cocks should be at least 1/2 in nominal size and be in accordance with BS 2879.
- 14.1.3 Economy valves can only be used in a DIRECT installation.

NOTE: The circulator thermostat is factory set to provide a temperature range of 50°C to 82°C. The temperature is increased by rotating the thermostat knob clockwise and temperature stop 2 **MUST** be left in position, see Figure 11. If the circulator is used in a direct application, ensuring a maximum temperature of 60°C. For indirect applications, remove temperature stop 2.

In order to ensure that soundness of the heater is maintained, you **MUST** ensure that flow and return pipes into the sealed compartment are sealed with the supplied grommets!

14.2 WATER CONNECTIONS

NOTE: Both flow and return connections are Rp3/4 (3/4" BSP female) connections.

IMPORTANT: Use compression fittings at the appliance flow and return connections and at the air heater casing exit, to facilitate easy access to the circulator body.

- 14.2.1 Remove the fixing screws holding the sealing panel in place.
- 14.2.2 Carefully remove the sealing panel, such that access can be gained to the circulator compartment.
- 14.2.3 Knockouts/holes are provided in both sides of the heater cabinet for external pipe routing. Horizontal pipe runs are to be kept to an absolute minimum.

NOTE: In order to maintain an air tight seal, the supplied grommets **MUST** be used where the flow and return pipes pass through the upper sealing plate and diaphragm.

IMPORTANT: Ensure that the fittings on the circulator body are well supported when making flow and return connections.

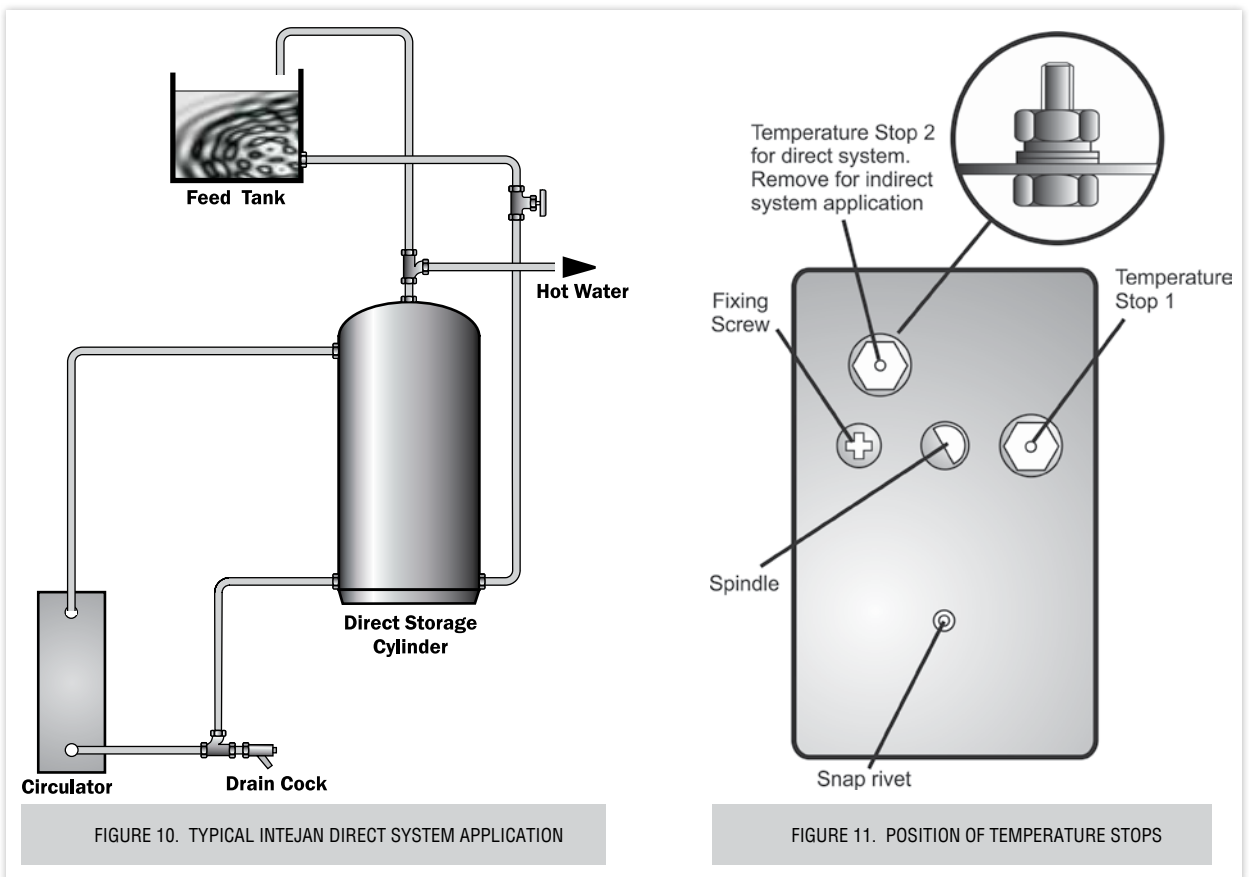


FIGURE 10. TYPICAL INTEJAN DIRECT SYSTEM APPLICATION

FIGURE 11. POSITION OF TEMPERATURE STOPS

15. INTEJAN CIRCULATOR COMMISSIONING

15.1 PREPARATION

- 15.1.1 Ensure that the gas and electrical supplies are **OFF**.
- 15.1.2 Fill the water circulation system, clear any air locks and check for water tightness, sealing any leaks detected.
- 15.1.3 Refit the sealing panel and secure using the fixing screws.

NOTE: Whilst the sealing panel needs to be fixed in such a manner so as to ensure an air tight seal, care **MUST** be taken not to over tighten the fixing screws.


15.2 LIGHTING IGNITION & MAIN BURNERS:

- 15.2.1 Turn on the gas supply to the heater.
- 15.2.2 Set both the "AIR HEATER" and "WATER HEATER" switches on the time control unit to the "OFF" position.
- 15.2.3 Set the thermostat so that it reaches the maximum stop.
- 15.2.4 Locate the LED status indicator which can be observed through the inspection hole at the bottom right hand corner of the control module.
- 15.2.5 Turn on the mains power supply to the heater.
- 15.2.6 Set the "WATER HEATER" switch on the time control to "CONT." and observe the LED status indicator.
- 15.2.7 Whilst the control module runs through its diagnostic cycle the decimal point (DP) in the bottom right hand corner of the LED display will flash continuously.
- 15.2.8 The igniter will spark for a maximum period of 60 seconds during which time the ignition burner and main burner **SHOULD** ignite and the igniter will stop.
- 15.2.9 When the control module reaches stage 8, (indicated by "8" on the LED) power is fed to the gas valve and the green LED "ON" light on the indicator panel will illuminate. After a period of approx. 5 seconds, the module will move on to stage 9 (indicated by "9" on the LED).

NOTE: Regardless of when the burner ignites during the 60 second period, the LED will continue to display stage 9.

15.2.10 If, after the 60 second period, the main burner has ignited the LED indicator will show "0" and the green LED "ON" light on the indicator panel will remain steady.

15.2.11 If the main burner fails to ignite, the red LED marked "LOCKOUT" will illuminate on the display panel and the LED status indicator will display an alphanumeric character relevant the fault detected.

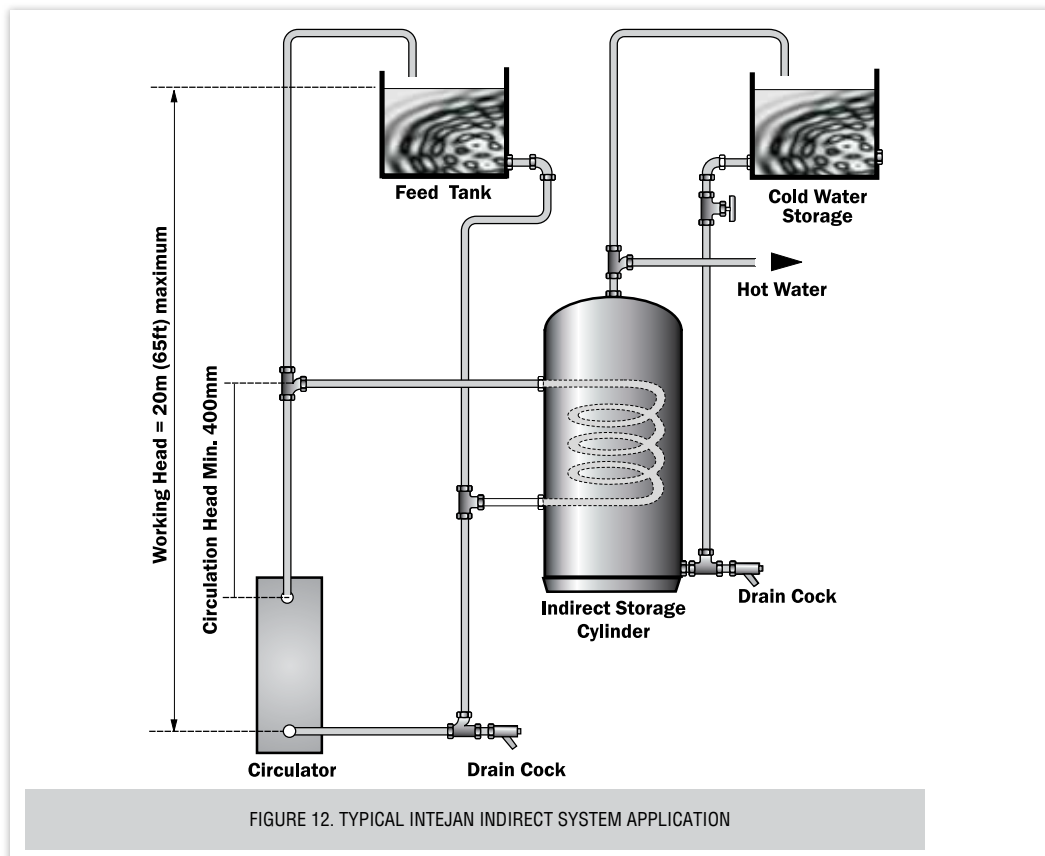

- 15.2.12 In the event of a lockout and the ignition and main burners failing to ignite, reference should be made to table 4 in the fault finding section of these instructions in order to establish the fault condition.
- 15.2.13 Test for gas leakage at the supply, multifunction control, ignition burner and main burner using proprietary detection fluid, sealing any leaks found.
- 15.2.14 Allow the circulator to operate for a minimum of 15 minutes to ensure stability.
- 15.2.15 Reset the thermostat to the desired water temperature.
- 15.2.16 Set the time control to the desired "on" and "off" periods.
- 15.2.17 Set the "WATER HEATER" switch on the time control to "TIMED".

15.3 WATER BURNER PRESSURE TEST

NOTE: THE WATER CIRCULATOR BURNERS ARE PRE-SET AND SHOULD NOT REQUIRE ADJUSTING.

- 15.3.1 Loosen the screw on the outlet pressure test point and fit a pressure test gauge (see Fig. 8)
- 15.3.2 Check the gauge reading against the information at paragraph 1.3.
- 15.3.3 If necessary, use the burner pressure adjuster to obtain the required gauge reading as shown at paragraph 1.3
- 15.3.4 Remove the pressure gauge and re-tighten the screw on the outlet pressure test point.

15.4 SAFETY CHECKS

- 15.4.1 Check for gas tightness within the appliance.
- 15.4.2 Check for water tightness around circulator and ALL joints.
- 15.4.3 Turn on both the gas and electrical supplies to the heater.
- 15.4.4 Set the "WATER HEATER" switch on the time control unit to "CONT".
- 15.4.5 Light the ignition and main burners as described in section 8.2
- 15.4.6 Allow the circulator to operate for a period of 5 minutes to stabilise.
- 15.4.7 Turn off gas supply to heater at the heater gas cock. **DO NOT TURN OFF AT GAS METER!**
- 15.4.8 The circulator **SHOULD** automatically go into "LOCKOUT" indicated by the red LED on the indicator panel and the LED status indicator will show "9"
- 15.4.9 Reinststate the gas supply and wait for a minimum period of 10 seconds.
- 15.4.10 Depress the "RESET" button on the indicator panel.
- 8 15.4.11 The heater will go through its reset sequence and the ignition and main burners **SHOULD** ignite.
- 15.4.12 Set the "WATER HEATER" switch on the time control unit to "TIMED"

16. USERS INSTRUCTIONS

- 16.1 If the building is unoccupied, ensure that the user instructions are left taped to the air heater for the user's reference and that the installation instructions are left at or near the air heater for use on future service calls.
- 16.2 If the building is occupied, hand the user instructions over and ensure that the user understands:
 - 16.2.1 How to light both the air heater and water circulator.
 - 16.2.2 How to re-set the air heater or water circulator if "**LOCKOUT**" occurs.
 - 16.2.3 How to operate the time control, thermista-stat and the **SUMMER AIRFLOW** switch.
 - 16.2.4 That the time control must be reset following a power failure.
 - 16.2.5 How to use the circulator thermostat to set the water temperature.
 - 16.2.6 How to turn off the heater and switch off the electrical supply to the heater.
 - 16.2.7 How to remove, clean and refit the air filter and at what intervals, (i.e. fortnightly, or weekly for new houses).
 - 16.2.8 How to control the heating system by opening and closing warm air outlets.
 - 16.2.9 How to obtain summer air circulation.
 - 16.2.10 That the air grilles on the heater or heater compartment; grilles and ventilators in the walls, windows or doors of the building **MUST NOT BE OBSTRUCTED**.
 - 16.2.11 That the heater must be serviced at least once a year by a competent person to ensure efficient and safe operation.
 - 16.2.12 That the red users instructions for safe use have been pointed out and understood.
 - 16.2.13 Explain how, in the event of a persistent "LOCKOUT" occurs, turn off the appliance and contact a "competent person" which in normal circumstances would be a GAS SAFE registered engineer.
- 16.3 Explain their responsibilities in respect of current legislation and regulations, both national and local.
- 16.4 A comprehensive service should be carried out **ANNUALLY**. Stress the importance of regular servicing by a Gas Safe Registered Engineer. In IE servicing work must be carried out by a Registered Gas Installer (RGI).

NOTE

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.



REMINDER: At the time of commissioning, complete all relevant sections of the Benchmark Checklist located on the inside back pages of this document prior to handing over the appliance to the occupier.

17. SERVICING & MAINTENANCE

NOTE: It is recommended that this appliance be serviced at intervals of no less than 12 months.

IMPORTANT: Ensure that the gas and electricity supplies are isolated before commencing any servicing & maintenance or replacement of components. Because the appliance is room sealed, it is also imperative that if at any stage of repairs the gasket on the sealing plate is damaged it **MUST** be replaced! After completion of any maintenance, always test for gas tightness and carry out a complete functional test of the appliance in accordance with the Commissioning Instructions at paragraphs 6.1 to 6.6 inclusive.

17.1 ROUTINE MAINTENANCE

- 17.1.1 Operate the appliance and check for the correct function of the burner and controls.
 - 17.1.2 Turn OFF the gas and electrical supplies to the appliance.
 - 17.1.3 Remove the air heater front panel.
 - 17.1.4 Remove and check the return air filter/cleaner for cleanliness, remove and clean the air circulation fan as detailed in para 10.6.
 - 17.1.5 Remove the burner and controls assembly as detailed in para 10.2, inspect and clean the main burner and injector as necessary. Examine the main burner for cracks, including hairline cracks, exchanging the burner as necessary.
 - 17.1.6 Inspect and clear the ignition burner orifice.
 - 17.1.7 Clean the heat exchanger flueways by thoroughly brushing from above and below.
 - 17.1.8 By viewing through the fan aperture, and using a torch or similar, examine the heat exchanger externally for signs of cracks or holes, particularly around welded joints.
 - 17.1.9 Using a torch or similar, introduce a light source into the heat exchanger burner aperture and upper access port, and again examine the heat exchanger for signs of cracks or holes, particularly around welded joints, whilst again viewing through the fan aperture.
 - 17.1.10 Refit the air circulation fan, burner and controls assembly, sealing panel and air filter/air cleaner.
 - 17.1.11 Allow the air heater to operate for approximately 15 minutes to ensure stability and, with the main burner lit, ensure that the operation of the air circulation fan does not affect the main burner flame profile.
 - 17.1.12 Locate the flue gas test point and attach a flue gas analyser to the test point in accordance with the manufacturer's instructions.
- NOTE:** The CO/CO₂ ratio should be no greater than 0.008
- 17.1.13 Fully commission the appliance in accordance with paragraphs 6 and 8.

NOTE: The flue gas test **MUST NOT** be used as an alternative to servicing the heater!

17.2 MULTIFUNCTION CONTROL & AIR HEATER/WATER CIRCULATOR BURNER ASSEMBLY REMOVAL

NOTE: Both the air heater and water circulator burner assemblies, as well as their respective ignition burner assemblies, **MUST** be removed as a complete unit together with their respective multifunction control.

PROCEDURE

- 17.2.1 Ensure that the gas and electrical supplies are switched OFF.
- 17.2.2 Remove the front door from the heater.
- 17.2.3 Remove the fixing screws that hold the sealing panel in place and carefully remove the panel.
- 17.2.4 Disconnect the electronic module from the relevant multifunction control by removing the securing bolt and sliding it away from the heater unit, taking care not to cause damage.
- 17.2.5 Break the flared connection on the relevant multifunction control from the gas supply feed.
- 17.2.6 Remove the relevant burner assembly fixing screws.
- 17.2.7 Whilst supporting the assembly, carefully remove the fixing screws securing the multifunction control.
- 17.2.8 Carefully remove the complete assembly, by sliding the sealing grommet out of the bulkhead, taking care not to cause damage to the grommet!
- 10.2.9 Refitting the burner assembly is a reverse procedure of the above instructions.

17.3 BURNER ASSEMBLY CLEANING

- 17.3.1 Remove the burner assembly as detailed above.
- 17.3.2 Disconnect the ignition burner gas feed pipe from the ignition burner
- 17.3.3 Release the 2 screws, and washers securing the ignition burner to the main burner and remove the ignition burner.
- 17.3.4 Release the 3 screws and washers securing the main burner to the mounting bracket and remove the main burner.
- 17.3.5 Clean the burner thoroughly both inside and out with a soft brush. **DO NOT ENLARGE, DISTORT OR DAMAGE BURNER HOLES.**
- 17.3.6 Reassemble in reverse order.

17.4. IGNITION BURNER & ELECTRODE REMOVAL & REPLACEMENT

- 17.4.1 Remove the burner as detailed in paragraph 17.3.
- 17.4.2 Disconnect the igniter lead from electrode.
- 17.4.3 Break the gas feed at the burner end of the gas feed pipe.
- NOTE:** If, at any time, the gas supply feed pipe is removed from the multifunction control, the 'O' ring **MUST** be replaced.
- 17.4.4 Release the 2 screws and washers securing the ignition burner to the main burner assembly and carefully remove the ignition burner assembly.
- 17.4.5 Release the electrode securing nut from the ignition burner assembly and withdraw the electrode.
- 17.4.6 Release the ignition burner feed pipe securing nut from the ignition burner assembly and withdraw the feed pipe and injector from the ignition burner assembly. Disconnect the ignition burner injector from the ignition burner feed pipe hook.
- 17.4.7 Refitting or replacement is in reverse order.

17.6 AIR CIRCULATING FAN, REMOVAL AND CLEANING:

- 17.6.1 Ensure that the electrical supply is isolated.
- 17.6.2 Remove the front door from the heater and remove the fixing screws on the electrical door assembly.
- 17.6.3 Open the door assembly outwards on its hinges, See Figure 13, to gain access to the rear of the assembly.
- 17.6.4 Disconnect the fan flying leads from the fan assembly.
- 17.6.5 Release the fan assembly securing screws and withdraw the fan assembly from the heater cabinet, avoiding damage to the fan blades.
- 17.6.6 Remove all dust from both the impeller and motor, taking care to not disturb the balance of the fan.
- 10.6.7 Refitting or replacement is in reverse order.

10.7 CONTROL MODULE REMOVAL

- 17.7.1 Ensure that the electrical supply is isolated.
- 17.7.2 Remove the front door from the heater.
- 17.7.3 Loosen the top and bottom screws holding the electrical cover plate in place on the electrical door assembly. See figure 7.

DO NOT COMPLETELY REMOVE THE SCREWS AT THIS STAGE.

- 17.7.4 Remove the cover plate by sliding it upwards, such that it exposes the control module.
- 17.7.5 Carefully disconnect the module by lifting the connecting blocks off the circuit board. See Figure 13.

NOTE: There is no need to loosen any of the connection screws on the connector blocks!


- 17.7.6 Completely remove the top and bottom cover plate screws and pull the control module free of the electrical door assembly.
- 17.7.7 Fit the new control module in place and partially fit the cover plate fixing screws.
- DO NOT TIGHTEN SCREWS AT THIS STAGE!
- 17.7.8 Re-connect the module by carefully pushing the connector blocks onto the circuit board.
- 10.7.9 Re-fit the electrical cover plate and tighten the cover plate screws.

- 17.7.10 Re-establish electrical supply.
- 17.7.11 Commission air heater and water circulator as described in the relevant sections above.

17.8 TIME CONTROL, SWITCH & LED INDICATOR (DAUGHTER BOARD) REMOVAL

PREPARATION

- 17.8.1 Ensure that the electrical supply is isolated.
- 17.8.2 Remove the appliance front door and release the 3 x securing screws on the electrical door assembly.
- 17.8.3 Open the door assembly outwards on its hinges, See Figure 13, to gain access to the rear of the assembly.

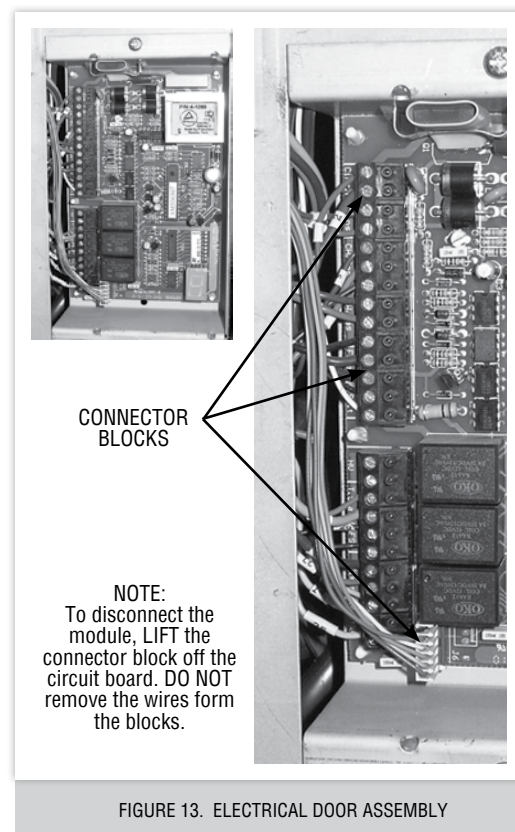

TIME CONTROL REMOVAL

- 17.8.3 Disconnect spade terminal connectors “C1”, “C2”, “C3” and “C5” from the time control.
- 17.8.4 Release the 3 x fixing screws securing the clock mounting plate to the electrical door and withdraw the total assembly from the door.
- 17.8.5 Remove the 3 x M3 bolts that secure the time clock mechanism and remove from the mounting plate.
- 17.8.6 Refitting or replacement is in reverse order.

LED INDICATOR (DAUGHTER BOARD)

- 17.8.7 Disconnect the daughter board by unplugging the fly lead from the control module board.
- 17.8.8 Release the 3 x fixing screws securing the clock mounting plate to the electrical door and withdraw the total assembly from the door.
- 17.8.9 Remove the 2 x M3 nuts holding the board onto the bolts and remove.
- 17.8.10 Replacement is in reverse order, ensuring to refit the spacers.

SWITCH/S REMOVAL

- 17.8.11 Disconnect the spade terminal connectors “S1”, “S2” and “S3” or “S4”, “S5” and “S6” from the switch terminals.
- 17.8.12 Release the switch/s by pressing out from the back of the electrical door assembly.
- 17.8.13 Fit new switch/s and lock into position by pressing home until the locking tabs locate on the top and bottom of the switch.
- 17.8.14 Re-connect the spade connectors.
- 17.8.15 Re-fitting of the electrical door assembly is in reverse order.
- 17.8.16 Close the electrical door assembly and secure using the 3 x fixing screws.
- 17.8.17 Set the time control to correct time.
- 17.8.18 Set the time control to the required “ON” and “OFF” periods.

17.9 FAN DELAY CONTROL/LIMIT SWITCH REMOVAL

- 17.9.1 Ensure that the electrical supply is isolated.
- 17.9.2 Remove the appliance front door.
- 17.9.3 Remove the 2 x fixing screws holding the FDC/limit switch assembly in place and withdraw from the appliance.
- 17.9.4 Disconnect the wires from the terminal block and release the clamping bush, in order to remove the wiring harness.
- 17.9.5 Refitting or replacement is in reverse order.

17.10 WATER CIRCULATOR THERMOSTAT REMOVAL

- 17.10.1 Remove the appliance front door.
- 17.10.2 Disconnect the two spade terminals from the back of the thermostat.
- 17.10.3 Carefully loosen the control knob from the shaft of the thermostat using a large flat head screwdriver and remove.
- 17.10.4 Loosen and remove the 2 x screws securing the thermostat and remove the thermostat from its mounting bracket.
- 17.10.5 Refitting or replacement is in reverse order.

17.11 HEAT EXCHANGER ACCESS

- 17.11.1 Ensure that the gas and electrical supplies are isolated.
- 17.11.2 Remove the appliance front door.
- 17.11.3 Remove the fixing screws holding the sealing panel in place and carefully remove the panel.
- 17.11.4 Remove the burner assembly as detailed at 17.3
- 17.11.5 Remove the multifunctional control for the water circulator (IF FITTED)
- 17.11.6 Release the fixing screws securing the combustion chamber heat shield and withdraw the heat shield.
- 17.11.7 Release the fixing screws securing the top access cover plates and withdraw the cover plate and gasket.
- 17.11.8 Release the fixing screws securing the heat exchanger top sealing plate and withdraw the sealing plate and gasket.
- 17.11.9 Reassembly is in reverse order.

NOTE: When reassembling ensure that gaskets are soundly sealed and replaced where necessary (See cautionary note at paragraph 10) Prior to use, you MUST fully commission the heater in accordance with these instructions.

17.12 FLUE FAN, REMOVAL & CLEANING

- 17.12.1 Remove the air circulation fan as detailed at 17.6
- 17.12.2 Carefully open the plastic insulators on the fan fly-lead and break the electrical connections such that the spade connectors can be fed through the grommet on the sealing plate.
- 17.12.3 Remove the fixing screws holding the flue fan sealing plate in place and remove the plate.
- NOTE: WHEN REMOVING THE PIPES FROM THE PRESSURE TAPPING STAKE CARE TO NOTE THEIR POSITION!**
- 17.12.4 Release the fixing screws holding the flue fan in place.
- 17.12.5 Carefully withdraw the fan and its gasket from the collector box, taking care not to damage the fan blades.
- 17.12.6 Remove all dust from both the impeller and motor, taking care not to disturb the balance of the fan.
- 17.12.7 Refitting/replacement is in reverse order.

18. DEFECT DIAGNOSIS

The following table shows the LED status indicator display and the corresponding fault condition, along with the lockout type. It should be noted that under certain conditions the red LED relating to the air heater may flash. This is part of the control sequence and the module should reset automatically. It is ONLY necessary to press the "RESET" button if the red LED is continually illuminated!

NOTE: When the air heater and water circulator are used in combination, the status indications for the water circulator will override those for the air heater; therefore LED displays "8" and "9" will override "5" and "6". For this reason, it is strongly recommended that the air heater and water circulator be commissioned independently of each other.

DEFECT DIAGNOSIS			
LED	CYCLE	FAULT CONDITION	LOCKOUT TYPE
0	Running	None - all is well	NONE
1	Air Proving	Air switch closed	ABSOLUTE
2	Air Proving	Gas valve relay ON (either)	ABSOLUTE
3	Air Proving	Air switch Closure failure	ABSOLUTE
4	Prove Heater Relay	Gas valve current, relay should be open	AIR HEATER
5	Prove Heater Valve	None (wait for ignition burner)	AIR HEATER
6	Prove Heater Valve	Flame failure	AIR HEATER
7	Prove Circulator Relay	Gas valve current, relay should open	CIRCULATOR
8	Prove Circulator Valve	None (wait for ignition burner)	CIRCULATOR
9	Prove Circulator Valve	Flame failure	CIRCULATOR
A	Running	Excessive cabinet temperature	ABSOLUTE
C	Running	Air flow sensor our of range	AIR HEATER
E	Running	Problem with air circulator fan	AIR HEATER
F	Running	Air heater limit stat	AIR HEATER
H	Running	Circulator limit stat	CIRCULATOR
L	Running	Circulator limit stat	AIR HEATER
U	Running	Mains spikes detected (no fan demand)	AIR HEATER

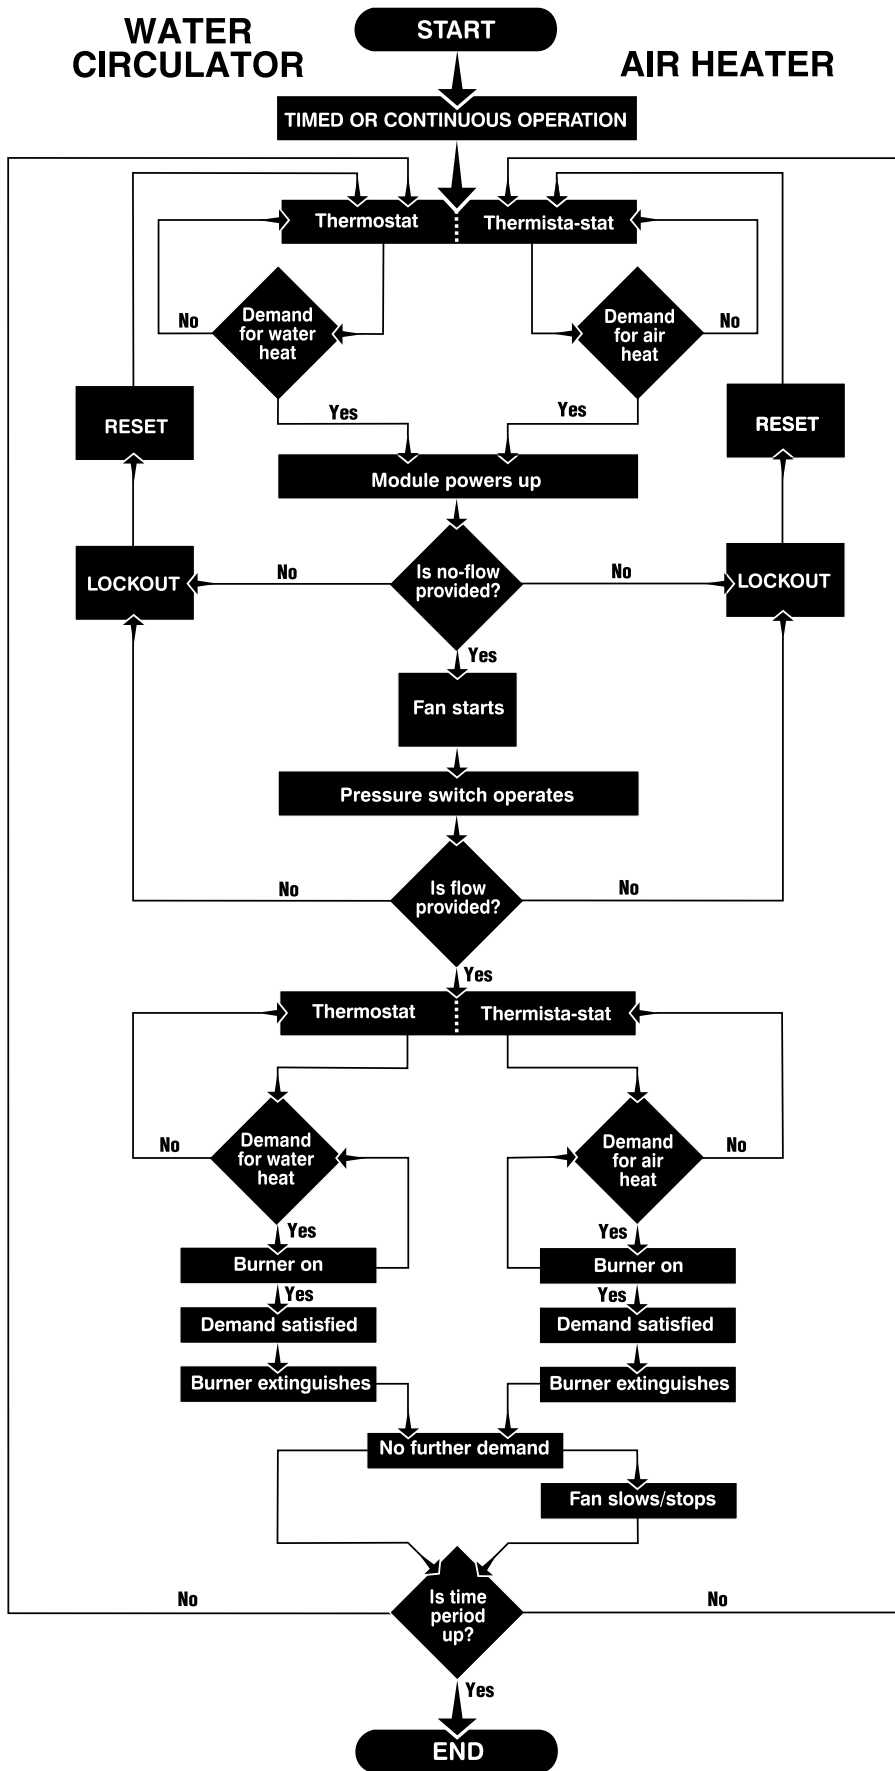


FIGURE 14. CONTROL FLOWCHART

FIGURE 15.
AIR HEATER DIAGNOSIS FLOWCHART


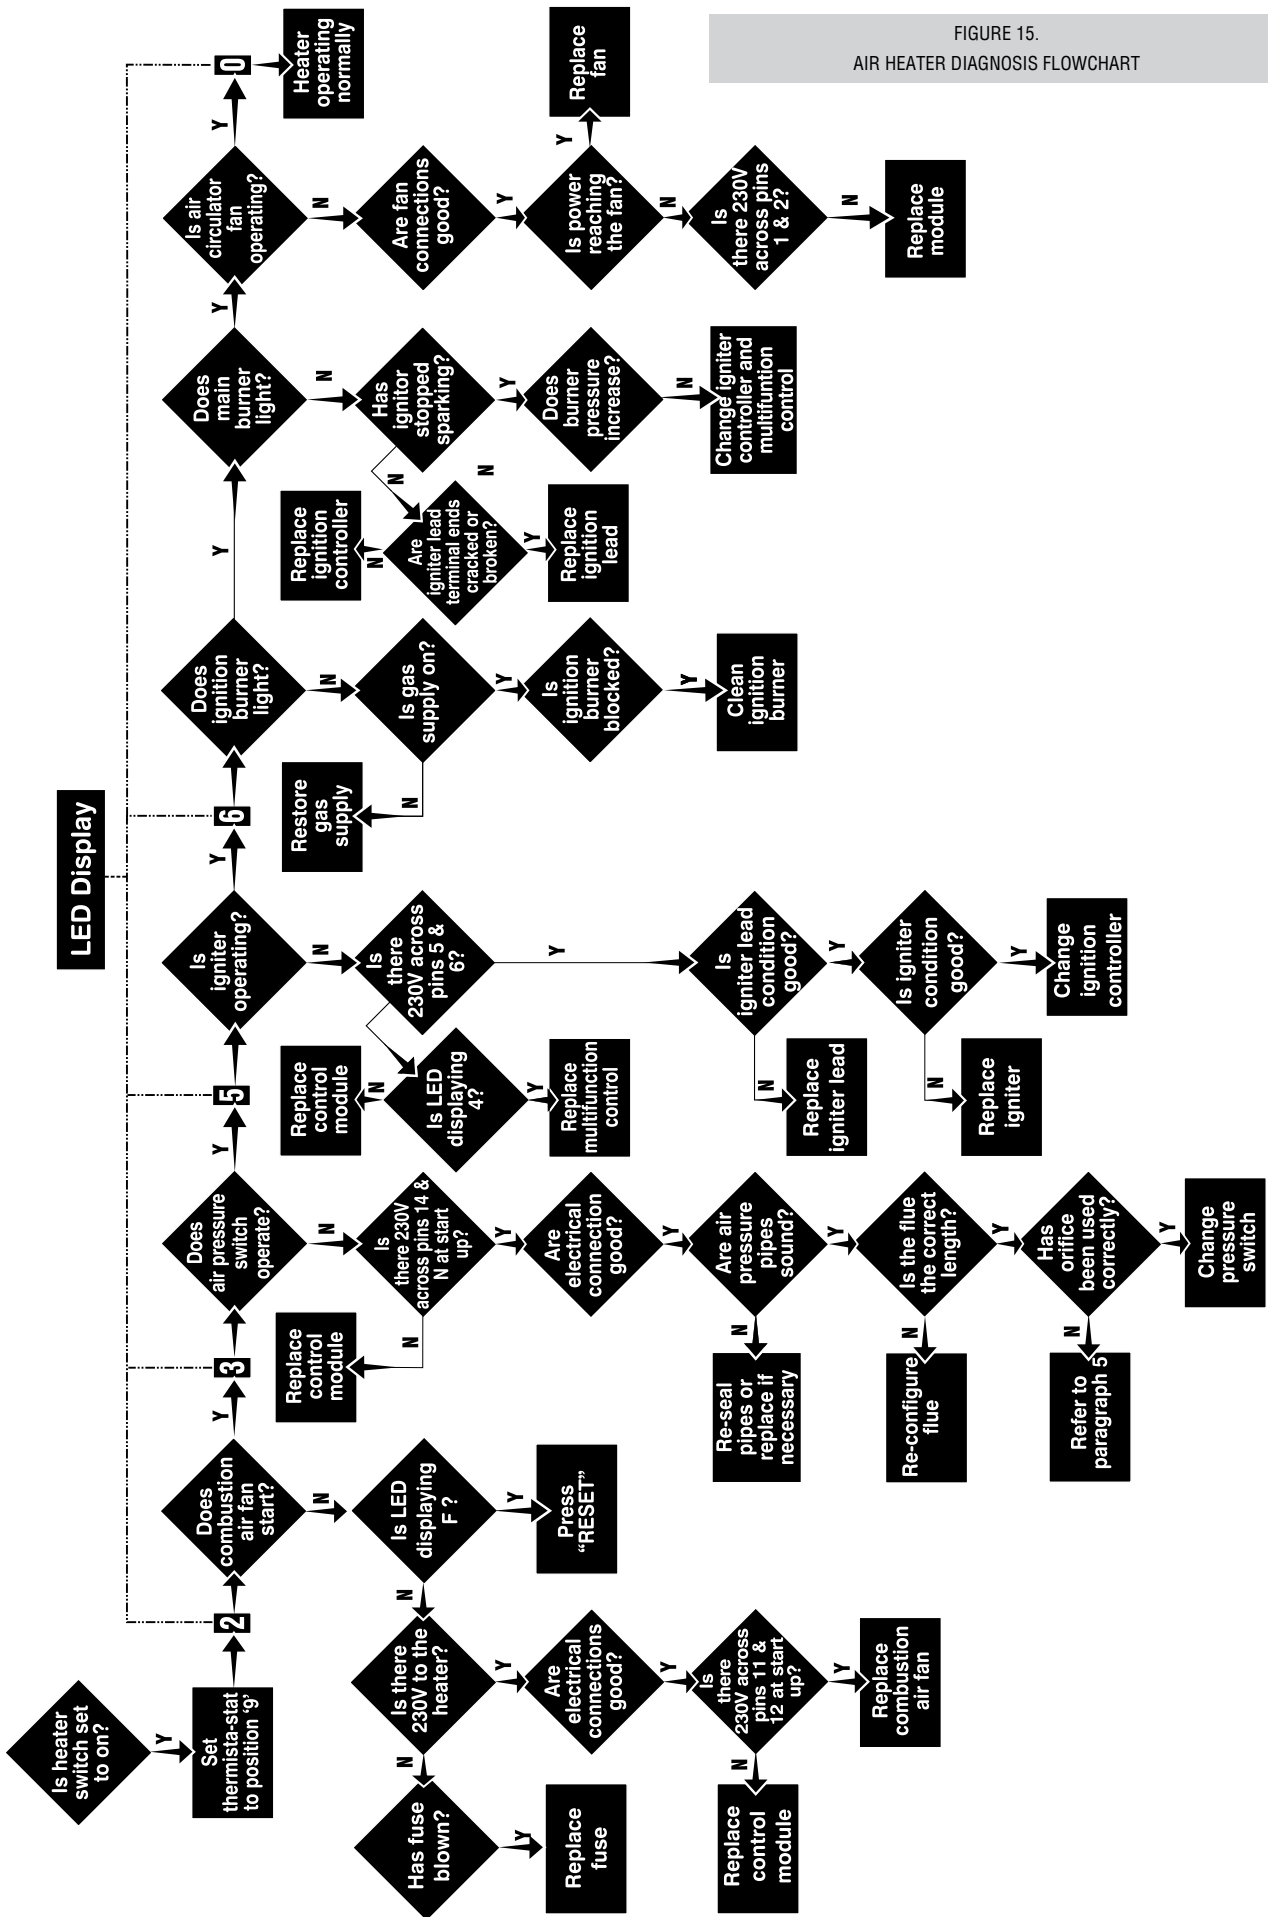


FIGURE 16. WATER CIRCULATOR FLOW CHART

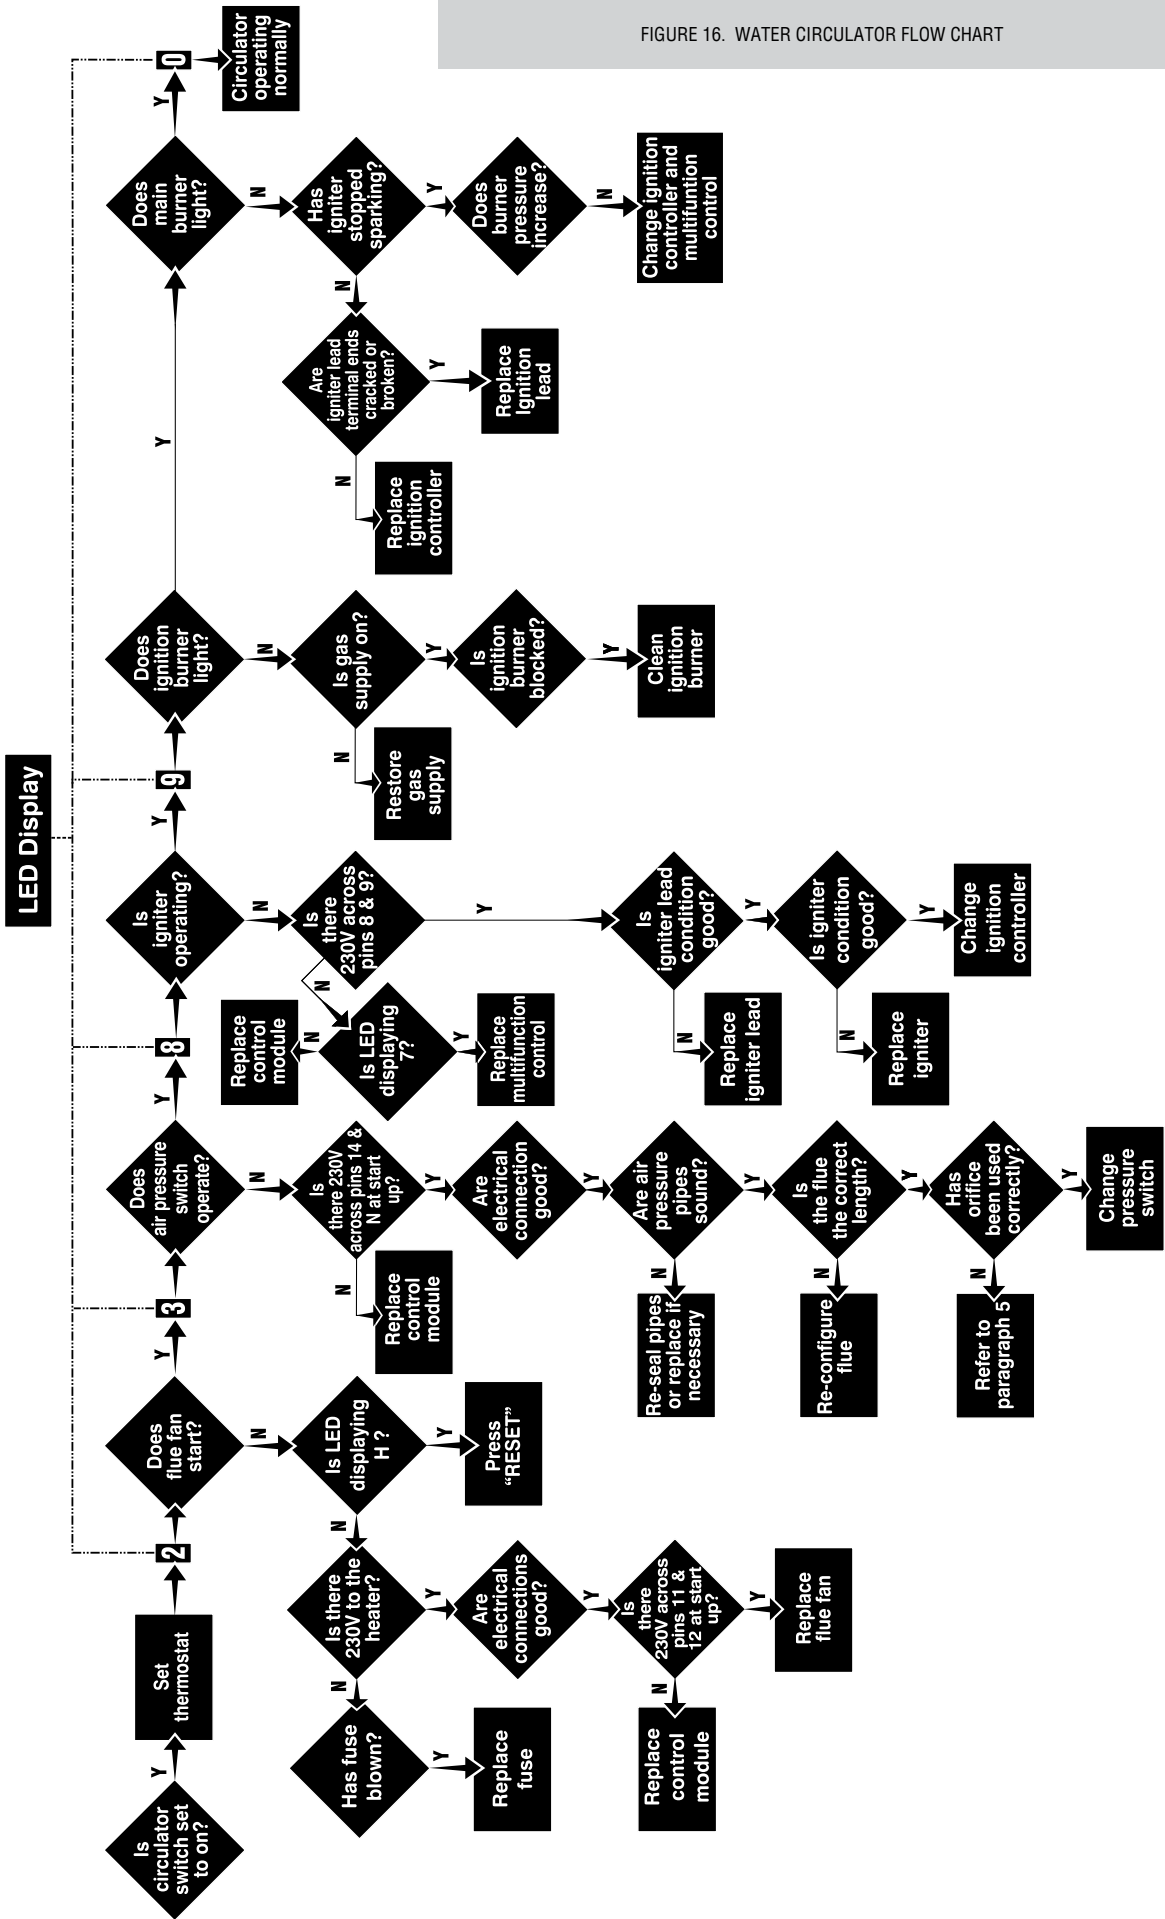

20. LOGIC DIAGRAM

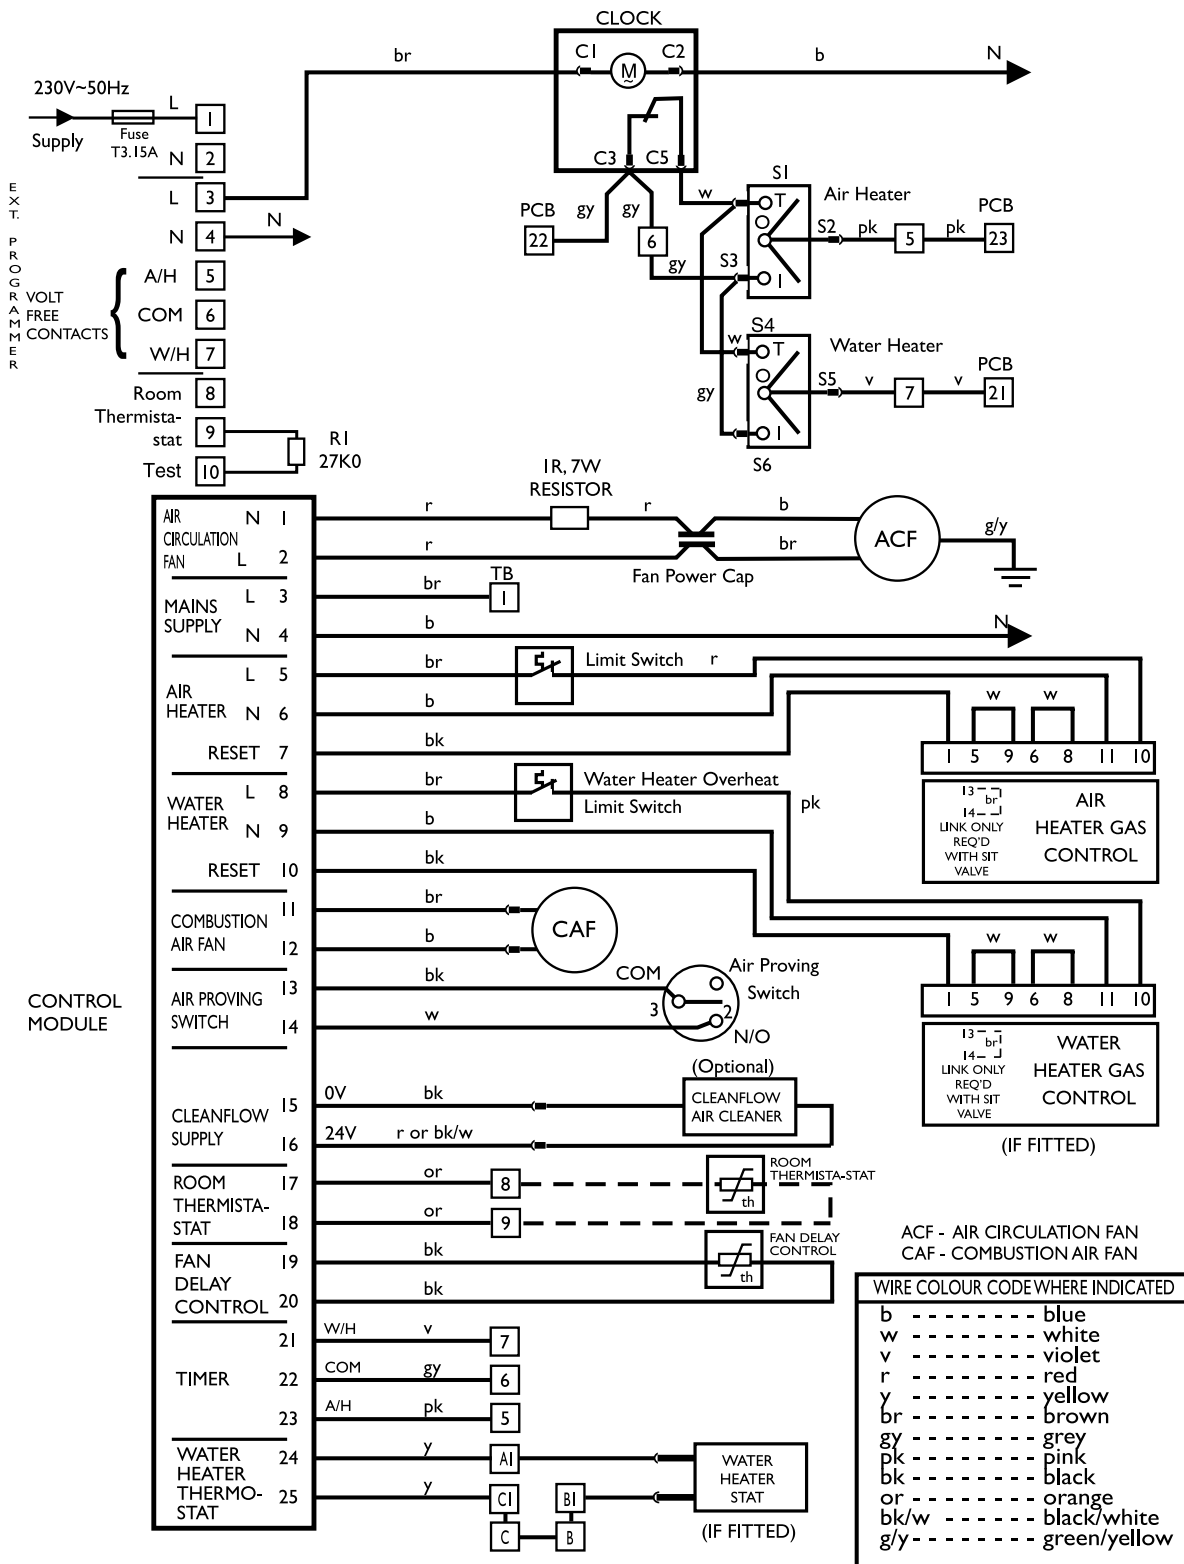


FIGURE 17. LOGIC DIAGRAM

21. SCHEMATIC DIAGRAM

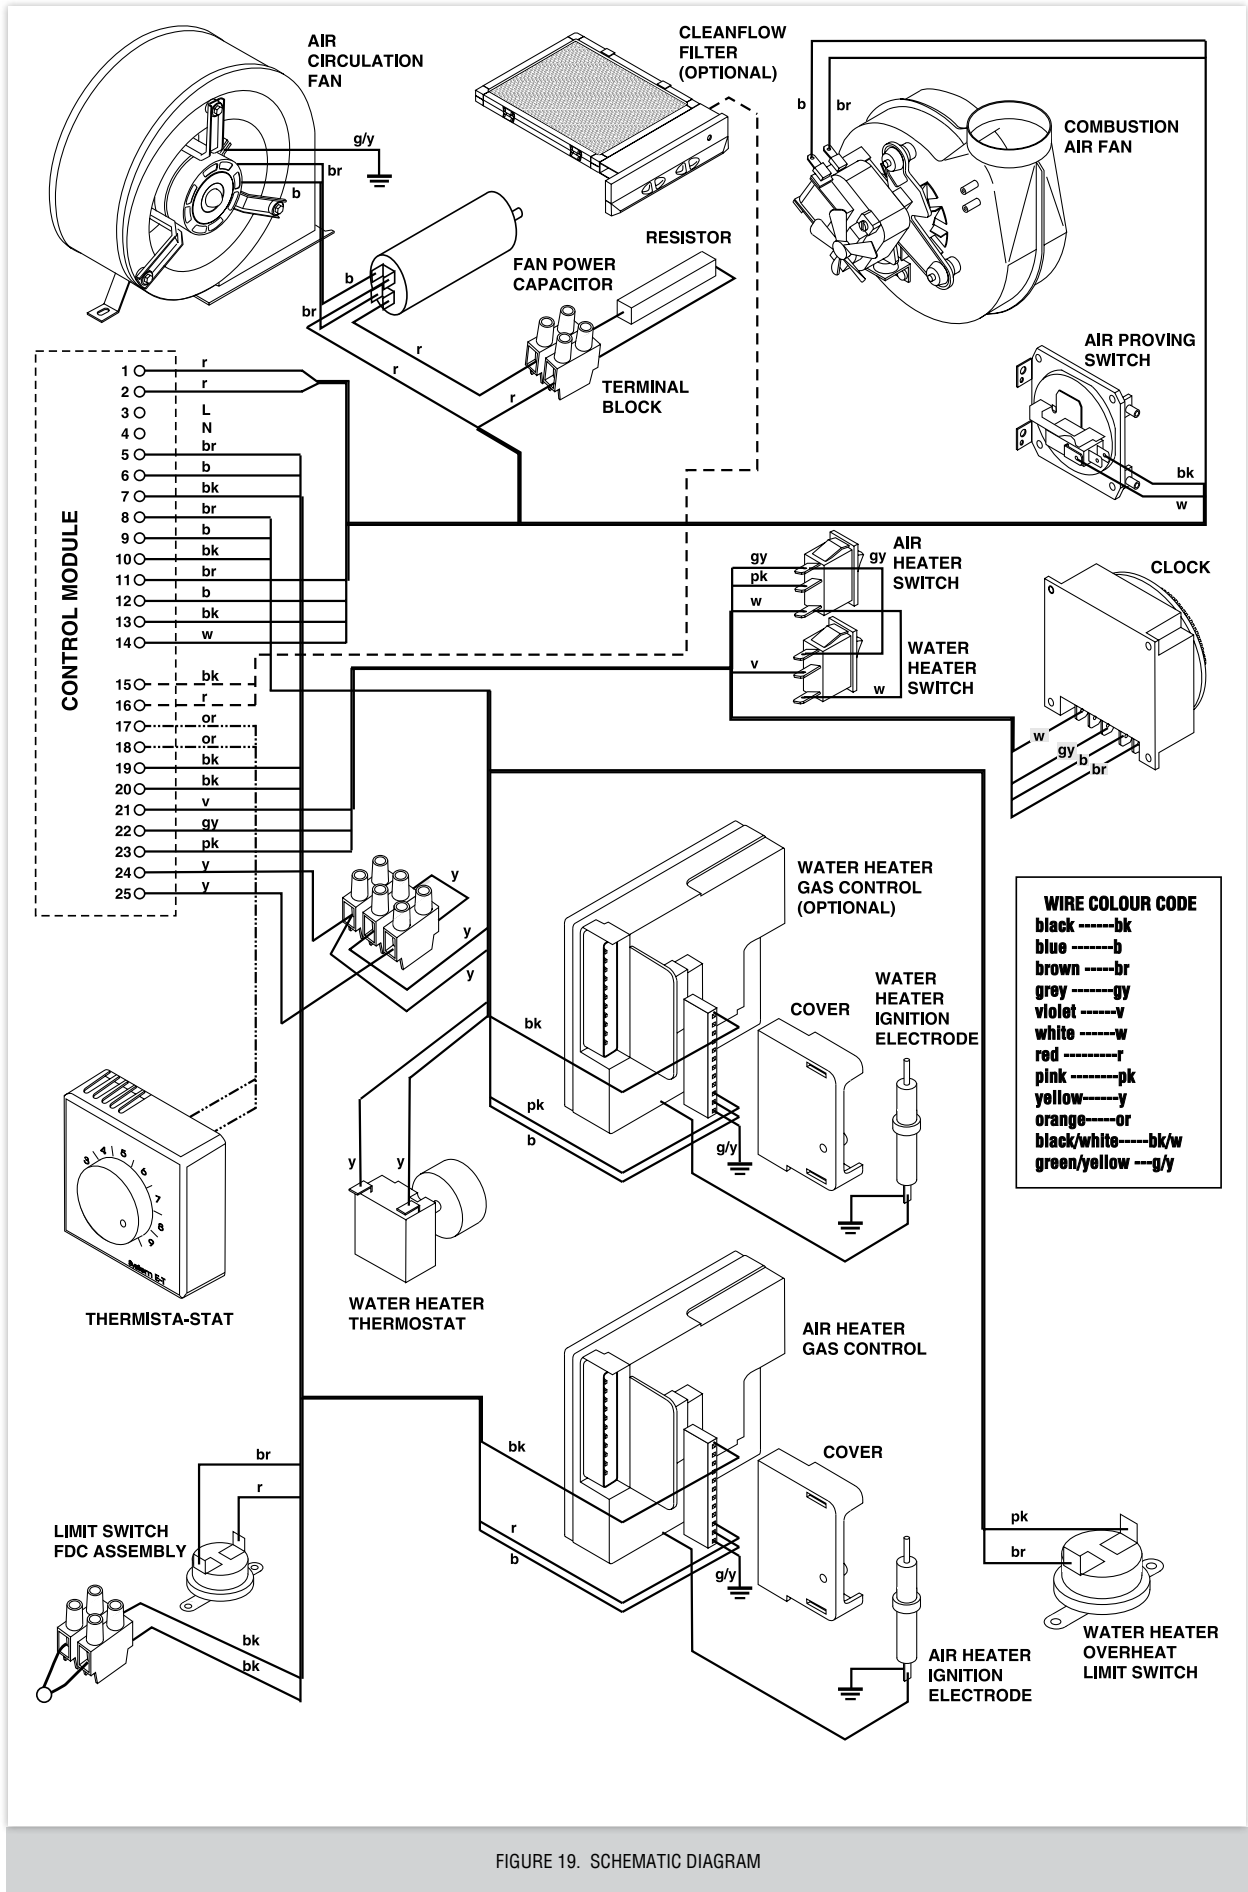


FIGURE 19. SCHEMATIC DIAGRAM

22. CIRCUIT DIAGRAM

Showing connections of an external controller

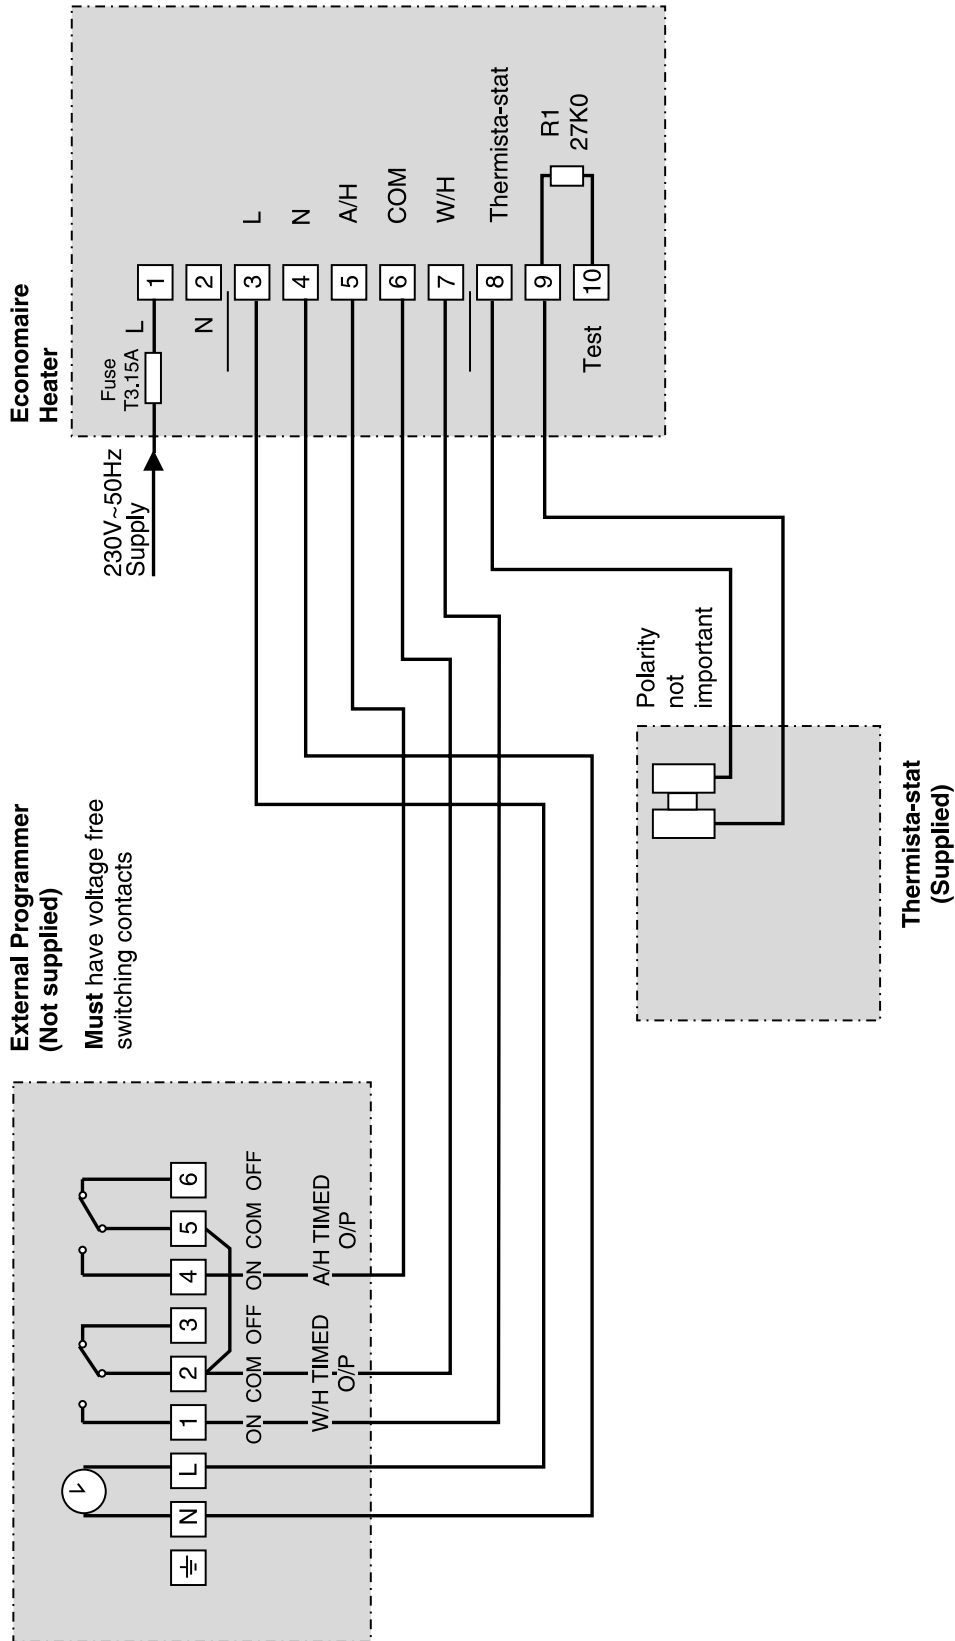


FIGURE 19. SCHEMATIC DIAGRAM (showing connection of an external controller)

23. DIMENSIONS

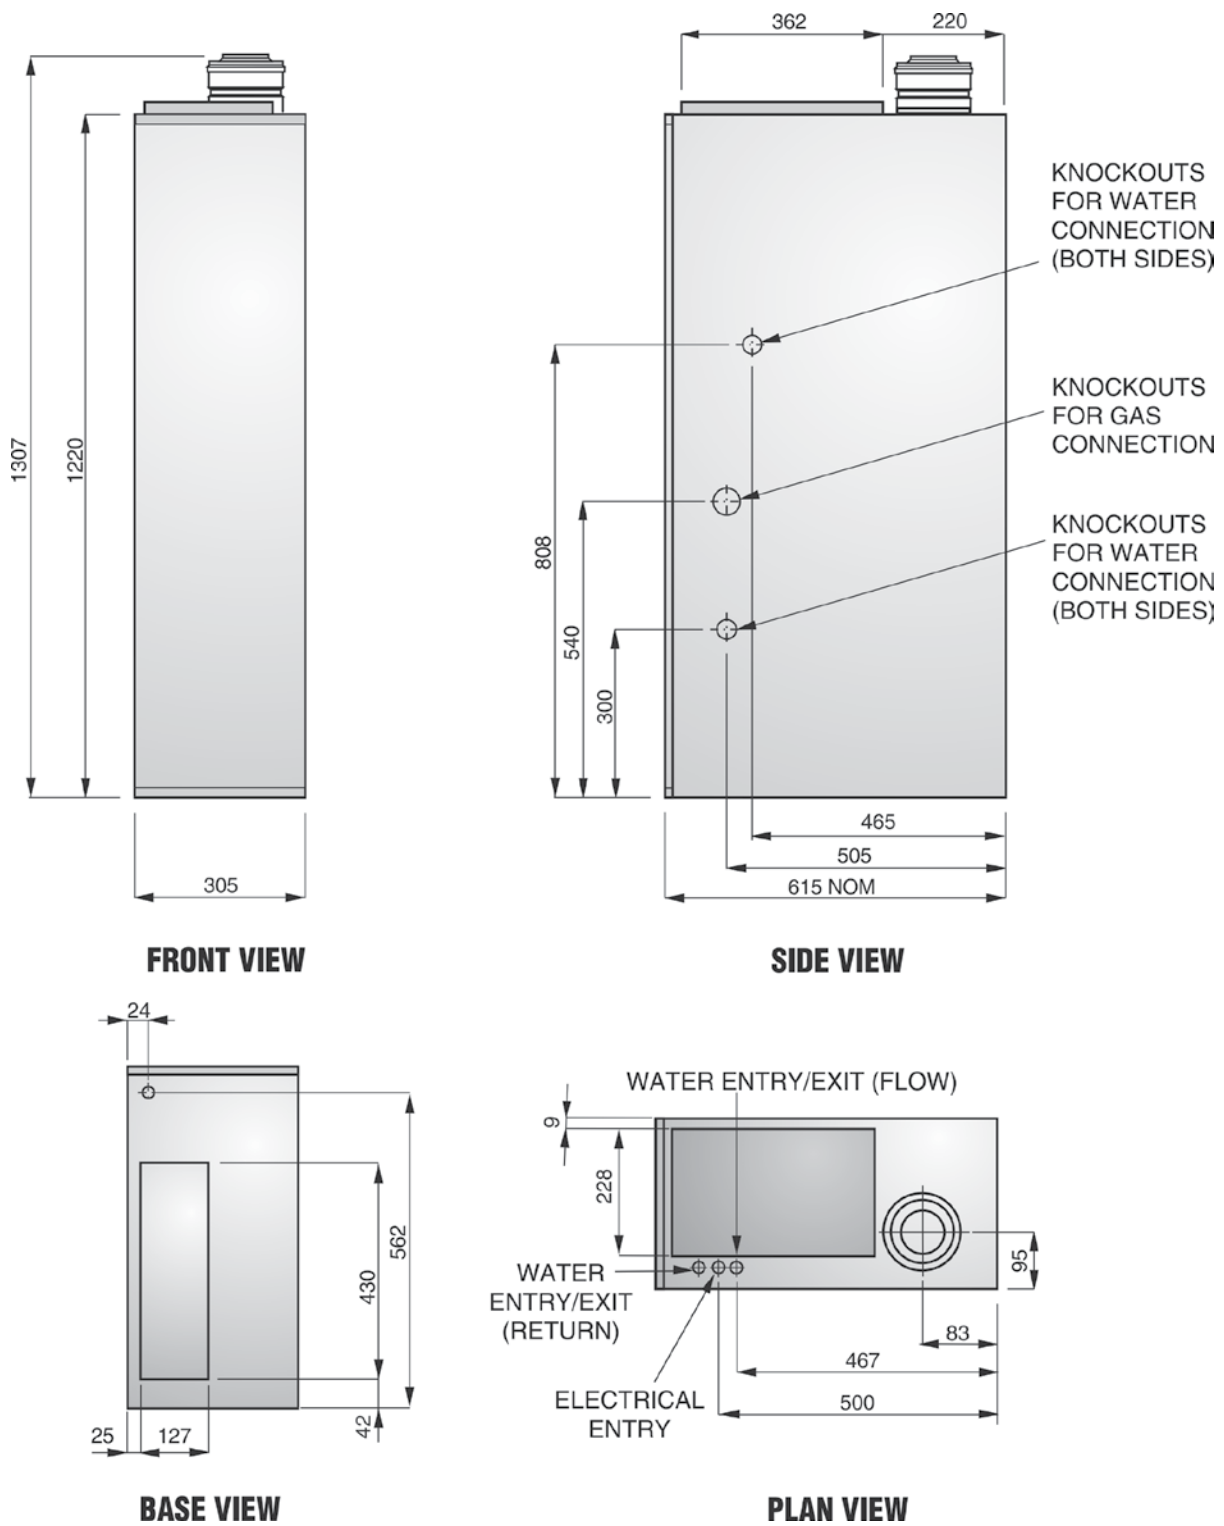


FIGURE 20. ECONOMAIRE 65 DIMENSIONS

24. SORT LIST OF SPARES

ITEM	G.C. No.	PART No.	DESCRIPTION	QTY
1	E69625	1000-0521020	Wiring Harness	1
2	E80119	1000-0521860	Wiring Harness (air heater)	1
3		N650-0101000	Heat Exchanger (cabinet sub assembly)	1
4	E80123	1000-0521820	FDC & Limit Switch	1
5	E82818	N650-0182000	Filter Assembly	1
6	E82947	N650-0702000	Burner & Control Assembly	1
7	398353	208S711	Main Burner Injector	2
7a		1000-0705340	Cross-light Injector	1
8	E39538	BOS 02397/1	Ignition Burner Assembly	1
9	E69631	1000-0520860	Air Pressure Switch	1
10	E69632	1000-0520830	Clock Mechanism	1
11	E82949	1000-0708820	Ignition Burner Feed Pipe	1
12	E80141	1000-0708510	Electric Flame Control Device (Honeywell)	1
13		1000-0708990	Igniter Lead	1
14	E80143	1000-0708520	Multifunction Control	1
15	245 514	1000-0515620	Thermista-stat	1
16	E84230	N650-0504005	Combustion Air Fan (SIFAN)	1
17	E69644	N320-0500000	Complete Electrical Panel	1
18	E80146	1000-0520850	Control Module	1
18a	E69648	1000-0520880	Reset Panel (Daughter Board)	1
19	245 509	1000-0513820	Fuse T3.15A (anti surge)	1
20	E82822	1000-0522010	Capacitor 15µf	1
21	E82952	N650-0167000	Cabinet Door Assembly	1
22	E82823	J652-0525005	Air Circulation Fan	1
23	E05998	1000-0701260	Ignition Burner Injector	1
24	E69653	1000-1507310	Gasket	1
25	E69709	1000-0000390	Air Pressure Tube	2
26	E80151	1000-2501050	Grommet	1
27	E82831	1000-0708800	Gas Feed Pipe	1
28	E69656	1000-0505540	Electronic Bos(Cleanflow)	1
29	E05248	AO354X0357	Cleanflow Filter Medium Pads	1
30	E82824	1000-0708810	Gas Feed Pipe	1
31		1000-0708890	Union Elbow	1
32			View Port Window (Not always available as a spare)	1
33	244-876	S00284	Main Body Assembly (including baffle & spring clip)	1
35	E80155	1000-0521870	Wiring Harness	1
36	E69670	1000-0520920	Overheat Cut-Off Switch	1
37	E82955	N650-0700000	Burner Control Assembly	1
38	E80143	1000-0708520	Multifunction Control	1
39	384 615	BOS 00562	Burner Arm	1
40	379 874	BOS 02397/1	Ignition Burner	1
41	388 003	1000-0802040	Thermostat	1
42	E80158	1000-0702090	Main Injector Nozzle (Amal 187/001/400)	1
43	392935	1000-0701260	Ignition Burner Injector	1
44	E80159	1000-0708990	Igniter Lead	1
45	E82829	1000-0708770	Main Burner Gas Feed Pipe	1
46	230 328	1000-2500070	Phial Retaining Plug	1
47	E80141	1000-0708510	Electronic Flame Control Device (Honeywell)	1
48	E82830	1000-0708830	Ignition Burner Feed Pipe	1
49	E82828	1000-0708790	Gas Feed Pipe	1
50	E80151	1000-2501050	Grommet	1

25. EXPLODED DIAGRAM

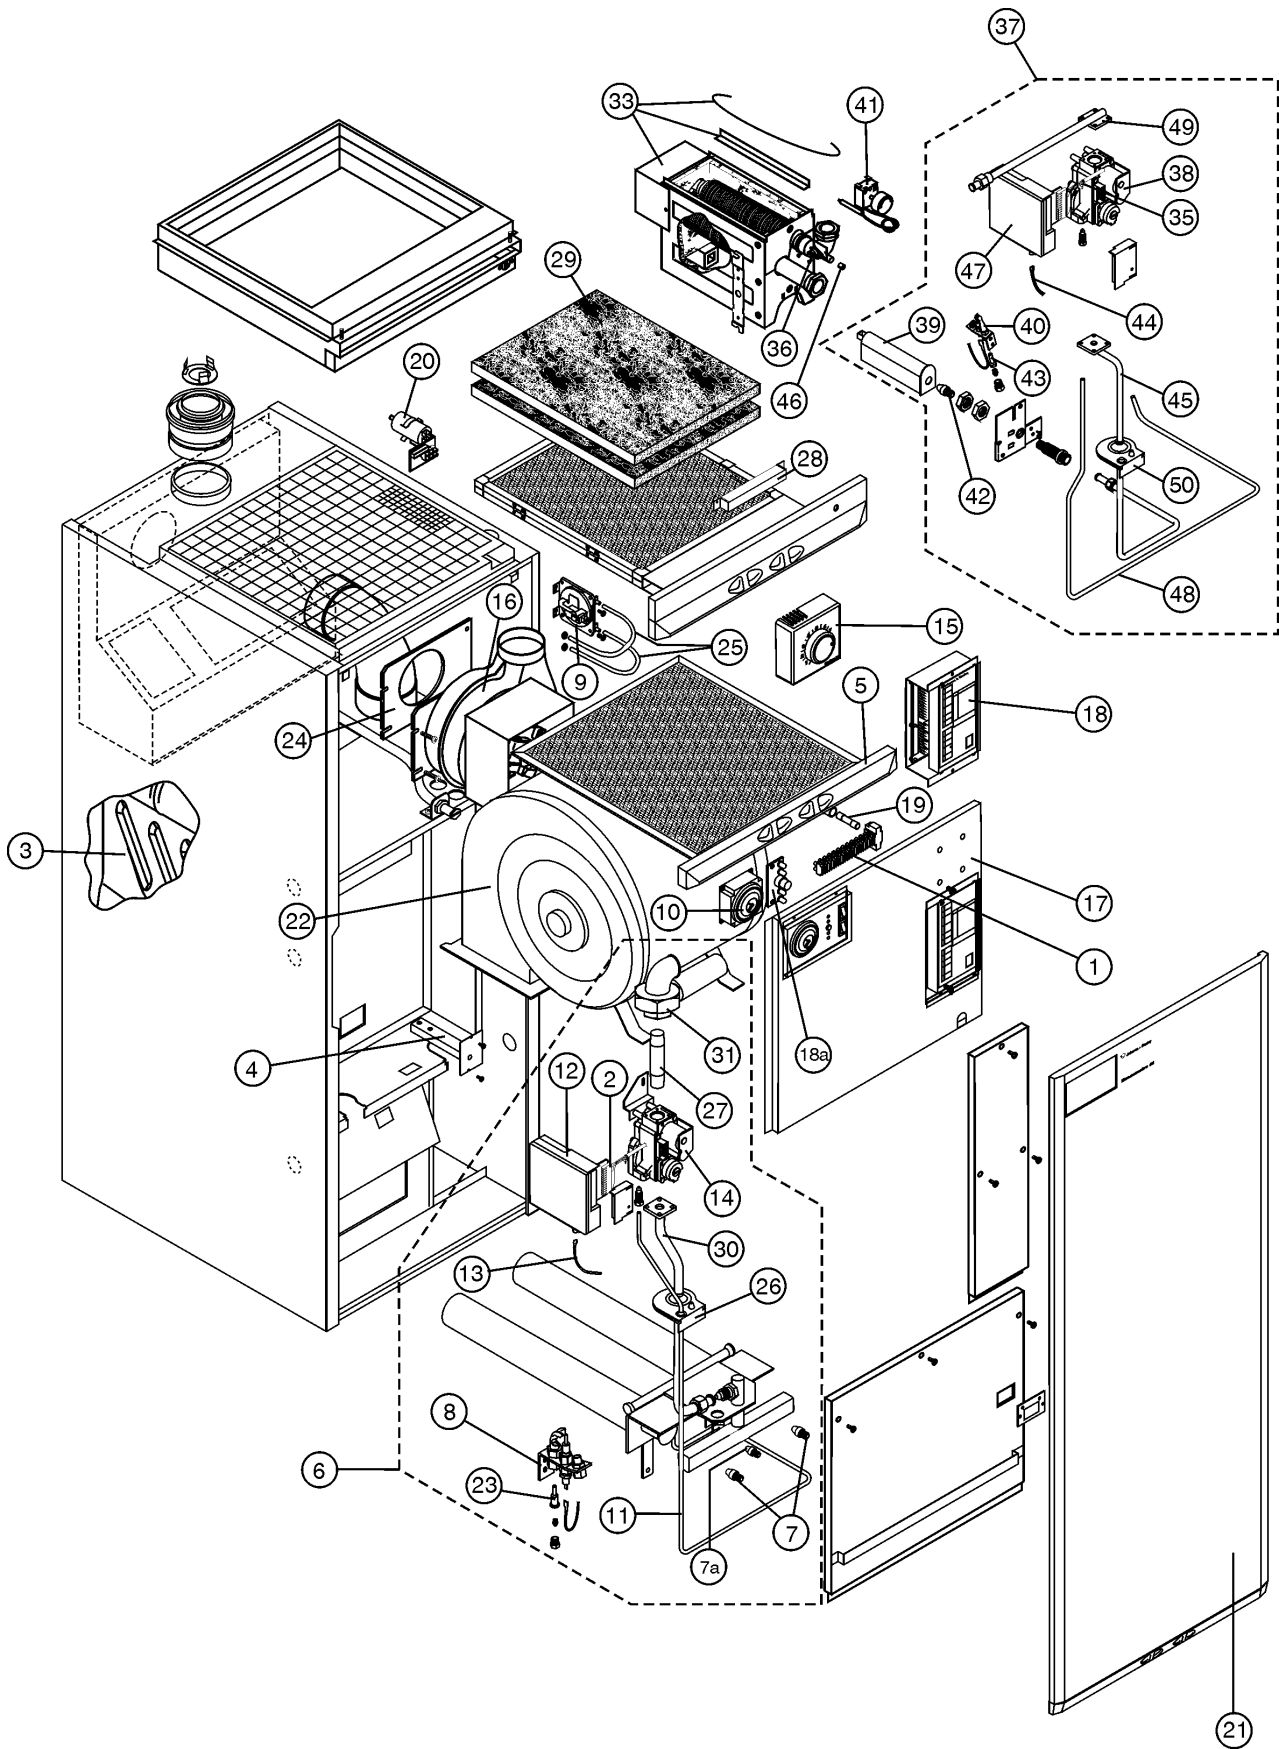


FIGURE 21. ECONOMAIRE 65 EXPLODED DIAGRAM

CONDENSING WARM AIR HEATING AND WATER HEATING COMMISSIONING CHECKLIST

This Commissioning Checklist is to be completed in full by the competent person who commissioned the wsnn air unit and associated equipment as a means of demonstrating compliance with the appropriate Building Regulations and then handed to the customer to keep for future reference

Failure to Install and commission this equipment to the manufacturer's instructions may Invalidate the warranty but does not affect statutory rights.

Customer name:										Telephone number:														
Address:																								
Warm Air Unit Make and Model:																								
Warm Air Unit Serial Number:																								
Commissioned by (PRINT NAME):										Gas safe register number:														
Company name:										Telephone number:														
Company address:																								
										Commissioning date:														
To be completed by the customer on receipt of a Building Regulations Compliance Certificate*:																								
Building Regulations Notification Number (if applicable)																								
CONTROLS (tick the appropriate boxes)																								
Time and temperature control to heating										Room thermostat and programmer/timer					Programmable Roomstat									
										Load/weather compensation					Optimum start control									
Heating zone control										Fitted					Not required									
WARM AIR HEATER																								
Has the system been balanced in accordance with the heater manufacture's instructions?															Yes				No					
Was an anemometer used?															Yes				No					
Have balancing dampers been fitted?															Yes				No					
WARM AIR HEATING: measure and record:																								
Bumer operating pressure (at maximum rate)																				mbar				
Heat input																				kW				
Temperature difference between return air inlet and nearest outlet																				°C				
WATER HEATING: (If fitted)																								
Water inlet temperature																				°C				
Water outlet temperature																				°C				
CONDENSATE																								
The condensate drain has been installed in accordance with the manufacture's instructions and/or BS 5546/BS6798																				Yes				
INSTALLATION																								
The heating and hot water system complies with the appropriate Building Regulations																				Yes				
The system and associated products have been installed and commissioned in accordance with the manufacturers instructions																				Yes				
The efficient operation of system and its controls have been demonstrated to and understood by the customer																				Yes				
The manufacturer's literature, including Benchmark Checklist and Service Record, has been explained and left with the customer																				Yes				
Commissioning Engineer's Signature																								
Customer's Signature																								
(To confirm satisfactory demonstration and receipt of manufacturer's literature)																								

*All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.



SERVICE RECORD

It is recommended that your heating system is serviced regularly and that the appropriate Service Interval Record is completed.

Service Provider

Before completing the appropriate Service Record below, please ensure you have carried out the service as described in the manufacturer's instructions. Always use the manufacturer's specified spare part when replacing controls.

SERVICE 01					Date:
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 02					Date:
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 03					Date:
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 04					Date:
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 05					Date:
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 06					Date:
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 07					Date:
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 08					Date:
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 09					Date:
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 10					Date:
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

*All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.





sustainable solutions
under one roof

Johnson & Starley Ltd

Rhosili Road, Brackmills,
Northampton NN4 7LZ

sales@johnsonandstarley.co.uk

marketing@johnsonandstarley.co.uk

Reception/Customer Service

01604 762881

Fax

01604 767408

